

Contents

Getting started 4

Assemble the phone, SIM card, battery, make a call.

Getting to know your phone 8

Phone overview, use the menus, enter letters, quick keys, Memory Stick Duo™, file manager.

Calling 18

Calls, phonebook, voice control, call options.

Messaging 34

Text messaging, picture messaging, email, My friends, messaging glossary.

Imaging 48

Camera, video recorder, pictures, screen saver.

Entertainment 54

Media player, sounds, themes, games.

Sony Ericsson S700i

Connectivity 61

Internet and email settings, synchronizing, Bluetooth™ wireless technology, infrared.

More features 69

Time and date, alarm clock, calendar, tasks, SIM card lock, etc.

Troubleshooting 77

Why doesn't the phone work the way I want?

Additional information 80

Sony Ericsson Web site, safe and efficient use, warranty, declaration of conformity.

Icons 87

Icon descriptions

Index 90

Sony Ericsson

GSM 900/1800/1900

Second edition (June 2004)

This manual is published by Sony Ericsson Mobile Communications AB, without any warranty.

Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this manual.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2004

Publication number: EN/LZT 108 7112 R2A

Please note:

Some of the services in this manual are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Guidelines for safe and efficient use* and the *Limited warranty* chapters before you use your mobile phone.

Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or

prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

PlayNow™ is a trademark or a registered trademark of Sony Ericsson Mobile Communications AB.

MusicDJ™ is a trademark or a registered trademark of Sony Ericsson Mobile Communications AB.

MagicGate, Memory Stick, Memory Stick Duo and Memory Stick PRO Duo are trademarks or registered trademarks of Sony Corporation.

The *Bluetooth* word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Ericsson is under license.

Microsoft and PowerPoint are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications.

T9™ Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat. No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide.

Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

End-user license agreement for Sun™ Java™ J2ME™.

- 1** Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.
- 2** Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries.

Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country/region to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders.

- 3** Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Part of the software in this product is copyright © SyncML initiative Ltd. (1999-2002). All rights reserved.

Other product and company names mentioned herein may be the trademarks of their respective owners.

Any rights not expressly granted herein are reserved.

Getting started

Assemble the phone, SIM card, battery, make a call.

More information and downloads are available at www.SonyEricsson.com/support.

Instruction icons

The following instruction icons appear in this user guide:



Important.



Note.



Contact your network operator for details.
➡ 6 Available services.



See also page XX.



Use the selection keys or the navigation key to scroll and select.



Press the navigation key.



Press the top of the navigation key.



Press the bottom of the navigation key.



Press the left of the navigation key.



Press the right of the navigation key.

Assembly

Before you can use your phone you need to:

- Insert the SIM card.
- Attach and charge the battery.

SIM card

When you register as a subscriber with a network operator, you get a SIM (Subscriber Identity Module) card. The SIM card contains a computer chip that keeps track of your phone number, the services included in your subscription, and your phonebook information, among other things.



If you have been using a SIM card in another phone, make sure that your information is saved to the SIM card before you remove it from the other phone. For example, contacts may have been saved in the phone memory, ➡ 20 Phonebook.








SIM card and battery information

Always turn off the phone and detach the charger before you insert or remove a SIM card.



It may take up to 30 minutes before the battery icon appears when charging.

To insert the SIM card and charge the battery

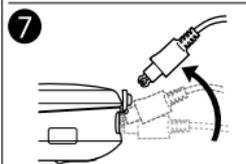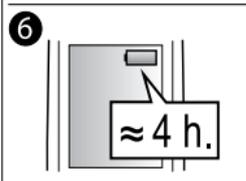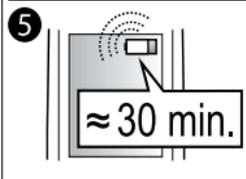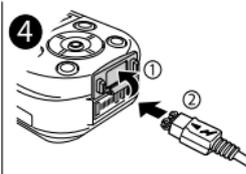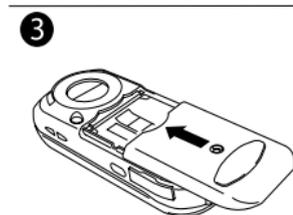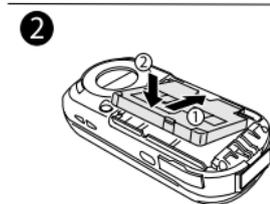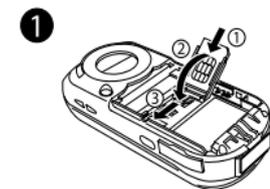

- 1 Lift the SIM card holder in the direction marked OPEN. Slide the SIM card into the holder slots with the gold connectors facing down.
- 2 Place the battery on the back of the phone with the label side up and the connectors facing each other.
- 3 Place the battery cover as shown in the picture and slide it into place.
- 4 Open the connector cover and connect the charger to the phone at the flash symbol. The flash symbol on the charger plug must face upwards.
- 5 It may take up to 30 minutes before the battery icon appears on the screen.
- 6 Charge for 4 hours or until the battery icon indicates a full charge. If you do not see the battery icon after this time, press any key or  to activate the screen.
- 7 Remove the charger by tilting the plug upwards.

PIN (Personal Identity Number)

You may need a PIN (Personal Identity Number) to activate the services in your phone. Your PIN is provided by your network operator. When you enter your PIN, the digits appear as ****, unless your PIN starts with the same digits as an emergency

Getting started

number, for example 112. This is so that you can see and call an emergency number without entering a PIN, ➤ 19 *Emergency calls*.

If you make a mistake while entering your PIN, delete the number by pressing .



If you enter the wrong PIN three times in a row, the SIM card is blocked and the message PIN blocked appears. To unblock it, you need to enter your PUK (Personal Unlocking Key), ➤ 74 SIM card lock.

Available services

Some services and functions described in this user guide are network- or subscription-dependent. Because of this, all menus may not be available in your phone.



This symbol indicates that a service or function is network- or subscription-dependent.

Please consult your network operator for more information about your subscription.

Turning on the phone and making calls


Make sure that the phone is charged before you turn it on.

Setup wizard

You can use the setup wizard to help you get started with the basic settings in your phone. You can start the wizard from the menu system at any time.

To start the setup wizard

► **Settings** ► the **General** tab ► **Setup wizard**. Select the language for your phone. Follow the instructions that appear to complete the setup.

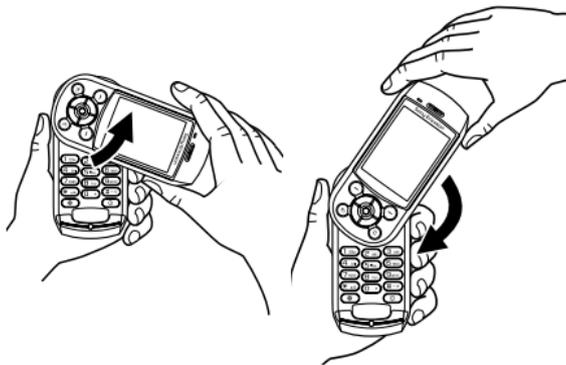To open/close the phone

- To open the phone, rotate the top section up until it clicks into place.
- To close the phone, rotate the top section down in the opposite direction.

! When you open the phone, rotate the top section 180 degrees to the left or right. Do not rotate the top section more than 180 degrees. If you force the top section more than 180 degrees in either direction, the phone will be damaged.

To turn on the phone

- 1 Press and hold , ➔ 8 Phone overview.
- 2 Enter your SIM card PIN, if you have one.
- 3 At first start-up, select the language you want for your phone menus.
- 4 ► **Yes** if you want the setup wizard to help you get started. Follow the instructions that appear.

To make and receive calls

Enter the area code and phone number ► **Call** to make the call. ► **End call** to end the call. When the phone rings ► **Yes**.

Getting to know your phone

Phone overview, use the menus, enter letters, quick keys, Memory Stick Duo™, file manager.

Phone overview



- 1 Ear speaker
- 2 Screen
- 3  Selection keys
- 4  Navigation key
- 5  Press once to go back one level in the menus. Press and hold to return to standby.
- 6  Sony Ericsson/Operator-defined key
- 7 Microphone. Do not cover the microphone with your hand. This affects call quality.
- 8  Delete numbers, letters or an item
- 9  Press and hold to turn the phone on/off
- 10 Photo light
- 11 Camera lens cover lock
- 12 Camera lens
- 13 Mirror for self-portraits
- 14 Loudspeaker
- 15  Stereo headset and charger connector
- 16  Memory Stick Duo™ slot
- 17  Shutter release
- 18  Volume buttons
- 19 Lock/light switch
- 20 Infrared port

Overview, menu

Available menu items may vary, please review the menus in your phone to get a complete overview.

1. PlayNow™™*

1. Sony Ericsson*

7. File manager

- Pictures
- Sounds
- Videos
- Themes
- Games
- Applications
- Other

10. Connectivity

- Online services
- Bluetooth
- Infrared port
- Synchronization
- Mobile networks
- Data communication
- Internet settings
- Streaming settings
- Settings for Java™™
- Accessories

2. Internet services*

8. Phonebook**

Contacts

- Options:
- Speed dial
- My business card
- Groups
- SIM numbers
- Special numbers
- Advanced
- New contact

11. Organizer

- Calendar
- Tasks
- Notes
- Applications
- Alarms
- Timer
- Stopwatch
- Calculator
- Code memo

3. Entertainment

- Games
- MusicDJ™™
- Record sound



12. Settings

► General

- Profiles
- Time & date
- Language
- Voice control
- Phone status
- Shortcuts
- Locks
- Setup wizard
- Master reset

4. Camera

8. Phonebook**

SIM numbers

- Options:
- Speed dial
- My business card
- Contacts
- Special numbers
- Advanced
- New number

► Sounds & alerts

- Volume
- Ringtone
- Silent mode
- Increasing ring
- Vibrating alert
- Message alert
- Key sound

5. Messaging

- Write new
- Inbox
- My friends
- Call voicemail
- Email
- Drafts
- Templates
- Outbox
- Sent items
- Saved items
- Settings

► Display

- Wallpaper
- Themes
- Start-up screen
- Screen saver
- Light
- Edit line names*

6. Radio

9. Media player

► Calls


- Divert calls
- Switch to line 2*
- Manage calls
- Time & cost
- Show or hide number
- Handsfree

*Please note that some menus are operator-, network- and subscription-dependent.

**The menu depends on which phonebook is selected as default.

Navigating the menus

The main menus are shown as icons on the desktop. Some submenus include tabs that appear on the screen. Scroll to a tab with the navigation key and select an option.

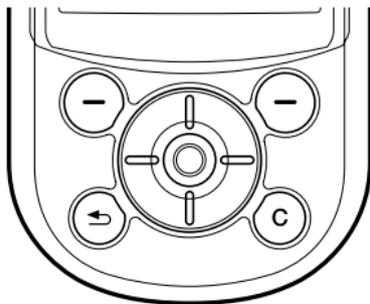

Press to go to the desktop.

Press to select highlighted items.

Press , , , to move through menus and between tabs.

Press to go back one level in the menus or to end a function. Press and hold to return to standby.

Press to select the options shown immediately above these keys on the screen.

Press to delete numbers, letters, or items.

Phone language

Most SIM cards automatically set the phone language to the language of the country where you bought the SIM card. Otherwise, the predefined language is English. If you use the setup wizard to help you get started with your phone, you will be asked to select the phone language, ➤ 6 Setup wizard.



You can always choose Automatic language by pressing 8888 in standby.

You can always choose English by pressing 0000 in standby.

To change the phone language

▶ Settings ▶ the General tab ▶ Language ▶ Phone language. Select a language.

Using help

Scroll to the menu item ▶ Info for more information, explanations or tips about selected features, menus or functions.

Shortcuts

A quicker way to move through the menus is to use shortcuts.

Using keypad shortcuts

Enter the menus by pressing **⊙** and then enter the number of the menu you want. For example, to reach the fifth menu item, press **(5)**. To reach the tenth, eleventh and twelfth menu items, press **(*)**, **(0)** and **(#)** respectively.

To create a standby shortcut

Press **⊙** in a direction for which there is no predefined shortcut. ► **Yes** when you are asked if you want to create a shortcut. Scroll to a function that you want to create a shortcut to ► **Shortcut**.

To edit a standby shortcut

► **Settings** ► the **General** tab ► **Shortcuts** and select the shortcut to edit ► **Edit**. Scroll to a function that you want to create a new shortcut to ► **Shortcut**.

More options

► **More** to enter a list of options. There are different alternatives in the list of options depending on where you are in the menus.

Entering letters

There are two ways of entering letters, for example, when writing a message or writing a name in the phonebook:

- **Multitap text input**
You press each key as many times as needed for the letter you want.
- **T9™ Text Input**

The T9 Text Input method uses a built-in dictionary to recognize the most commonly used word for each sequence of key presses. This way, you press each key only once, even if the letter you want is not the first letter on the key.

Writing languages

Before you start entering letters, you need to select the languages that you want to use.

When writing, you can switch to one of your selected languages by pressing and holding **(#)**.

To select writing language

► **Settings** ► the **General** tab ► **Language** ► **Writing language**. Scroll to each language that you want to use and mark it. ► **Save** to exit the menu.

To enter letters using multitap text input

To enter text, you have to be in a text input mode, for example ► **Messaging** ► **Write new** ► **Text message**. Press the appropriate key repeatedly to get the desired character.

Press...	to get...
	., - ? ! ' @ : ; / () 1
	A B C Å Ä Æ à ç 2 Γ
	D E F è é 3 Δ Φ
	G H I i 4
	J K L 5 Λ
	M N O Ñ Ö Ø ò 6
	P Q R S B 7 Π Σ
	T U V Ü ü 8
	W X Y Z 9
	+ 0 ⊕ ☰ Ψ Ω
	space ↵ ¶
	to delete letters and numbers

Press...	to get...
	to shift between capital and lower-case letters
 - 	press and hold to enter numbers

Example:

- To enter an ‘A’, press  once.
- To enter a ‘B’, quickly press  twice.
- To shift between capital and lower-case letters, press , then enter the letter.
- You can use the volume buttons as a shortcut to certain letters: To enter a ‘B’, press and hold  and press . To enter a ‘C’, press and hold  and press .

To enter letters using T9 Text Input

- 1 ► **Messaging** ► **Write new** ► **Text message**.
- 2 For example, to write the word “Jane”, press , , , .
- 3 If the word shown is correct, press  to accept and add a space. To accept a word without adding a space, press . If the word is not correct, press  or  repeatedly to view alternative words.

- 4 Continue writing your message. To enter a full stop or other punctuation marks, press **1** and then **☺** or **☻** repeatedly. Accept by pressing **#**.

To add words to the T9 dictionary

- 1 While entering letters ► **More** ► **Spell word**.
- 2 Edit the word using multitap text input. Navigate between the letters with **☺** and **☻**.
- 3 When you finish editing ► **Insert**. The word is added to the T9 dictionary. Next time you use T9, the word will appear as an alternative word.

To select another writing method

Before, or while entering letters, press and hold ***** to select another writing method.

Options when entering letters

► **More** to view a list of options. The list may contain some or all of the following:

- **Add symbol** – symbols and punctuation marks such as ? and , are shown. Move between the symbols by using **☺**, **☻**, **☼** and **☽**.
- **Add item** – pictures, melodies and sounds.
- **Spell word** – for T9 Text Input only. Edit the suggested word by using multitap text input.

- **Text format** – change style, size and alignment.
- **Writing language** – a list of available languages is shown.
- **Writing method** – a list of methods available for the current language is shown.
- **Dictionary (T9)** – turn T9 Text Input on or off.
- **Word suggestions** – select to view, or not, word suggestions when writing a word.
- **My words** – manage the words that you have added to the dictionary.
- **National chars.** – turn off language-specific characters to save space. This option appears only for some writing languages.


Memory Stick Duo™

Sony Memory Stick Duo™ gives you extra storage for pictures, music, video clips and other data.

With the Memory Stick Duo you can share your saved information by moving or copying it to another Memory Stick Duo compatible device.

This phone does not support Memory Stick PRO Duo™ nor MagicGate™ copyright protection technology.

To insert and remove the Memory Stick Duo

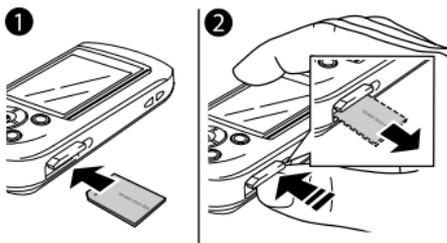

- 1 Insert the Memory Stick Duo in the slot.
- 2 Press the edge of the Memory Stick Duo to release it from the slot.

 Before you insert or remove the Memory Stick Duo, turn off the power.

Memory Stick Duo adaptor

Your phone comes with the shorter Memory Stick variant, Memory Stick Duo. Use the Memory Stick Duo adaptor when using your Memory Stick Duo in a device equipped with a regular-sized Memory Stick. Insert your Memory Stick Duo as shown on the adaptor. For more information, visit www.memorystick.com.

File manager

Items such as pictures, videos, sounds, themes and games are saved as files in folders. The phone has several predefined folders. You can create your own subfolders in the predefined folders and move your saved files to these subfolders.

You can select several files at the same time to delete or move to a folder. You can move and copy files between the Memory Stick Duo and the phone. Icons indicate where the files are saved.

All files, except some copyright-protected files, can be saved on the Memory Stick Duo. If the Memory Stick Duo is full, you cannot save anything until you have deleted some files from the Memory Stick Duo. If there is no Memory Stick Duo in the phone, files will be saved if the phone has enough memory left.

To move a file to a folder

- 1 ▶ **File manager** and select a folder.
- 2 Scroll to a file, for example, a picture that you want to move, **More** ▶ **Manage files** ▶ **Move to folder**.
- 3 Scroll to an existing folder, ▶ **Select** or select **New folder** ▶ **Add**, and name the folder, ▶ **OK**.

To select several files

► **File manager** and select a file ► **More** ► **Mark several**. Press **Mark** or **Unmark** to select more files.

To copy a file to the phone or Memory Stick Duo

- 1 ► **File manager**. Scroll to the file, for example, a sound, that you want to copy, ► **More** ► **Manage files**.
- 2 Select **Copy to phone** or **Copy to ext. mem**. Now you have two files with the same name, but with different icons telling you where the file is saved.

To move a file to the phone or Memory Stick Duo

- 1 ► **File manager**. Scroll to the file, for example, a sound, that you want to move, ► **More** ► **Manage files**.
- 2 Select **Move to phone** or **Move to ext. mem** and follow the same steps as for copying a file to the phone or Memory Stick Duo.

To delete a file from the Memory Stick Duo

► **File manager**. Scroll to the file you want to delete from the Memory Stick Duo, press **C** or **More** ► **Delete**.

File information

Items that are downloaded or received may be copyright-protected. If a file is protected, you may get a message that you cannot copy or send that file. You can also view information for the file.

Quick keys

Useful key combinations are described below.

Navigating menus

Enter the main menu and select menu items



Navigate in the menu and lists



Delete an item

press **C** in lists


Enter a list of options

► **More**

Enter the status menu to see, for example, date, profile, free memory and model name

press a volume button once

Change the language to **Automatic**



Change the language to **English**



Go back to standby or end a function

press and hold

Making and receiving calls

Make an emergency call enter the emergency number ► **Call**

Set the phone to silent press and hold **#**

Call your voicemail press and hold **1**

Enter call list ► **Calls**

Voice dial press and hold a volume button or say your magic word

Reach a contact beginning with a specific letter press and hold any of the keys **2** - **9**

Speed dial press any of the number keys **1** - **9** and ► **Call**

Reject a call quickly press a volume button twice when receiving a call or ► **No**

Turn off the ringtone when receiving a call

Put a call on hold

Retrieve a call

Turn off the microphone

Enter a list of options

Entering letters

Shift between capital and lower-case letters

Delete letters and numbers

Shift between multitap text input or T9 Text Input methods

Shift between writing languages

Enter numbers

Enter the + sign

press a volume button or 

► Hold

► Retrieve

press and hold 



press , then the letter

press 

press and hold 

press and hold 

press and hold any number key

press and hold 

Enter a *p* (pause)

press and hold 7 when entering numbers or saving codes

Using multitap text input

Reach the second letter or character of a key

press and hold  and press any of the number keys

Reach the third letter or character of a key

press and hold  and press any of the number keys

Enter a space

press 

Using T9 Text Input

View alternative words

 or 

Accept a word and add a space

press 

Enter a full stop

press 

View alternative punctuation marks

press , then  or  repeatedly

Calling

Calls, phonebook, voice control, call options.

Making calls

Before you can make or receive any calls, you must turn on the phone and be within range of a network,

➡ 6 *Turning on the phone and making calls.*

Networks

When you turn on the phone, it automatically selects your home network if within range. If not, you may be able to use another network that your network operator has an agreement with. This is called roaming.

You can select the network you want to use or add one to your list of preferred networks. You can also change the order in which networks are selected during an automatic search. For all such options

▶ **Connectivity** ▶ **Mobile networks.**



*You can call numbers from the call list and the phonebook, ➡ 23 *Call list*, and, ➡ 20 *Phonebook.**

You can also use your voice to make calls,

➡ 25 *Voice control.*

To make a call

Enter the area code and phone number.

▶ **Call** to make the call. ▶ **End call** to end the call.

To change the speaker volume

Use the volume buttons on the side of the phone to adjust the speaker volume during a call.

To turn off the microphone

⊙ ▶ **Mute microphone**, or press and hold  until the icon for muted microphone is displayed.

▶ **Unmute**, or press and hold  again, to resume the conversation.

Receiving calls

When you receive a call, the phone rings and **Answer?** is displayed.

If your subscription includes the Calling Line Identification service and the caller's number is identified, the number is displayed.

If the number is in the phonebook, the name, number, and picture (if assigned) are displayed. If the number is a restricted number, **Withheld** is displayed.

To answer a call

► Yes.

To reject a call

► No or quickly press a volume button twice.

Missed calls

If you have a missed call, **Missed calls**: appears in standby indicating the number of missed calls.

► **Yes** to view the missed calls in the call list. If you want to view the missed calls later ► **No**. Use , ,  and  to scroll between the tabs.

To check your missed calls

From standby ► **Calls** and scroll to the missed calls tab. To call a number from the list, scroll to the number ► **Call**.

Automatic redialling

The phone redials the number up to ten times or until:

- The call is connected
- You press **Cancel**
- You receive a call

Automatic redialling is not available for data calls.

If the call does not connect and **Retry?** is displayed

► **Yes**.

 *Do not hold the phone to your ear while waiting. When the call is connected, the phone gives a loud signal.*

Making international calls

When you make an international call, the + replaces the international prefix number of the country from which you are calling.

To make international calls

Press and hold  until a + sign appears on the screen. Enter the country code, area code (without the leading zero) and phone number ► **Call**.

Emergency calls

Your phone supports the international emergency numbers, 112 and 911. These numbers can normally be used to make an emergency call in any country (with or without a SIM card), if a GSM network is within range.

 *Your network operator may have saved additional local emergency numbers on the SIM card.*

To make an emergency call

Enter, for example, 112 (the international emergency number) ► Call.

To view your local emergency numbers

- Phonebook ► Options ► Special numbers
- Emergency numbers.

Phonebook

You can save your phonebook information in the phone memory as contacts, or on the SIM card as names and numbers. You can choose which phonebook – contacts or SIM numbers – is shown as default. For useful information and settings ► Options.

Contacts

You can save up to 510 numbers in your contacts. You can also add pictures, ringtones and information such as email, Web and street addresses to contacts. When you add information to a contact, the information is organized under five tabs. Use , ,  and  to scroll between the tabs and their information fields.

SIM numbers

On your SIM card, you can save entries as a name with a single number. The number of entries you can save depends on the memory available on the SIM card, see Phonebook ► Options ► Advanced ► Memory status.



Contact your network operator or service provider for more information.

Default phonebook

If you select contacts as default, your phonebook will show all information saved in contacts. If you select SIM numbers as default, the phonebook will only show names and numbers saved on the SIM card.

To select contacts or SIM numbers as your phonebook

- Phonebook ► Options ► Advanced
- My phonebook. Select Contacts or SIM numbers.

To add a contact

- 1 ► Phonebook ► New contact ► Add.
- 2 Enter the name directly or press Add and enter the name ► OK.
- 3 Enter the number directly or press Add and enter the number ► OK.

- 4 Select a number type.
- 5 Scroll between tabs and select fields to enter more information. To enter symbols, for example, @ ► **Symbols** and select a symbol ► **Insert**.
- 6 When you have entered the information ► **Save**.

To add a SIM number

If SIM numbers is the default phonebook, follow the same steps as for adding a contact. You can add only a name and number to the SIM numbers phonebook.

Pictures and personal ringtones

You can add a picture and a personal ringtone to a phonebook contact. When that person calls, the picture is displayed (provided your subscription supports the Calling Line Identification service) and the ringtone is played.

To add a picture or a personal ringtone to a contact

- 1 ► **Phonebook** and select the contact you want to add a picture or ringtone to ► **More** ► **View & edit**.

- 2 Scroll to the relevant tab and select **Picture:** or **Ringtone:** ► **Edit**. This takes you to **Pictures** or **Sounds** in the **File manager** menu.
- 3 Select a picture or sound. ► **Save** to save the picture or sound.

Calling from the phonebook

You can call a number saved for one of your contacts, or a number on your SIM card.

If contacts is the default phonebook, you can choose to call from contacts or SIM card.

If SIM numbers is the default phonebook, you can only call the numbers on the SIM card.

To call a contact

- **Phonebook**. Scroll to, or enter the first letters of the contact you want to call. When the contact is highlighted, press  or  to select a number ► **Call**.

To call a SIM number

- **Phonebook**. If SIM numbers is the default phonebook, select the name and number you want to call from the list ► **Call**. If Contacts is the default phonebook ► **Phonebook** ► **Options** ► **SIM numbers** and select the name and number you want to call from the list ► **Call**.

Ask to save

When you end a call, the phone can prompt you to add a phone number or email address to your contacts.

To activate ask to save in contacts

▶ Phonebook ▶ Options ▶ Advanced ▶ Ask to save ▶ On.

Updating the phonebook

You can easily update and edit any information in your phonebook.

To edit a contact

▶ Phonebook and select a contact ▶ More ▶ View & edit. Scroll to the relevant tab and edit the desired information ▶ Save.

To edit SIM numbers

If SIM numbers is the default phonebook, ▶ Phonebook and the number you want to edit. If contacts is the default phonebook, ▶ Phonebook ▶ Options ▶ SIM numbers. Select the name and number you want to edit. ▶ More ▶ Edit and edit the name and number.

To delete a contact or a SIM number

▶ Phonebook and scroll to the contact or SIM number you want to delete, press .

To delete all contacts

▶ Phonebook ▶ Options ▶ Advanced ▶ Delete all contacts. ▶ Yes and enter the phone lock code ▶ OK. The default phone lock code is 0000. Names and numbers saved on the SIM card are not deleted.

Default items for contacts

You can set the default item – phone number, email address or Web address – to be displayed first for each contact.

To set the default item for a contact

▶ Phonebook and scroll to a contact ▶ More ▶ Default. Select the phone number, email address or Web address that you want as default item.

Copying contacts

You can copy information between your contacts and the SIM card.



When you copy all contacts from the phone, all existing information on the SIM card will be replaced.

To copy names and numbers to the SIM card

► Phonebook ► Options ► Advanced ► Copy to SIM.
Select Copy all or Copy a number.

To copy SIM numbers to contacts

► Phonebook ► Options ► Advanced ► Copy from SIM. Select Copy all or Copy a number.

Sending contacts

You can send contacts using Bluetooth wireless technology, the infrared port or a text or picture message.

To send a contact

► Phonebook and select a contact ► More
► Send contact. Select a transfer method.

To send all contacts

► Phonebook ► Options ► Advanced
► Send all contacts and select a transfer method.

Checking the memory

With the memory status function in your phonebook, you can check how many positions are free in the phone memory and SIM card memory.

To check the memory

► Phonebook ► Options ► Advanced ► Memory status.

Synchronizing contacts

You can back up and synchronize your contacts with a phonebook on the Web. For more information about a phonebook on the web, please contact your service provider.

To synchronize contacts

► Phonebook ► Options ► Synchronize contacts ► OK. If you have more than one account, select which account to use ► Select. If you do not have an account in the phone, ➡ 65 To enter the settings.

Call list

The numbers of the last 30 calls that you have made are saved in the call list. If your subscription includes the Calling Line Identification service and the caller's number is identified, the call list also shows the numbers of answered and missed calls. Dialed, answered and missed calls are listed under separate tabs.

To call a number from the call list

► Calls from standby and select a tab. Scroll to the name or number you want to call ► Call.

To clear the call list

► Calls and scroll to the tab with all calls ► More
► Delete all.

Speed dialling

You can save phone numbers that you want to reach easily in positions 1-9 in your phone and on your SIM card. To speed dial with contacts as default phonebook, numbers have to be saved as contacts, and to speed dial with SIM numbers as default phonebook, numbers have to be saved on your SIM card.

To speed dial

From standby, enter the position number and ► Call.

To set the position number for speed dialling

► Phonebook ► Options ► Speed dial and scroll to the position to which you want to add a phone number ► Add. Select a number.

To replace a number in the speed dial list

► Phonebook ► Options ► Speed dial. Scroll to the number ► Replace. Select a new number for the position.

Voicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer.

Receiving a voicemail message

Depending on your network operator, you are informed that someone has left a message by a text message or by a voicemail icon. Press **Yes** to read the text message and call the voicemail service to listen to the message.

Calling your voicemail service

You can easily call your voicemail service by pressing and holding **1**. If you have not set your voicemail number, you will be asked if you want to enter the number. ► **Yes** to enter the number. You get the number from your service provider.

To enter the number to your voicemail service

► Messaging ► Settings ► Voicemail number.

Voice control

With your phone, you can use your voice to:

- Voice dial – call someone by saying the name.
- Activate voice control by saying a “magic word”.
- Answer and reject calls when using a handsfree kit.

You can save approximately 30 recorded words as voice commands in the phone. Voice commands cannot be saved on the SIM card. There are 25 seconds available for voice commands. When recording, make sure that you are in a quiet environment and try to use names that are distinct from each other, ➡ *27 Tips when recording and using voice commands.*

Before voice dialling

You must first activate the voice dialling function and record your voice commands. An icon appears next to a phone number that has a voice command.

To activate voice dialling and record names

- 1 ► Settings ► the General tab ► Voice control ► Voice dialling ► Activate ► Edit names ► New voice and select a contact.
- 2 If the contact has more than one number, use Ⓞ and Ⓞ to view the numbers. Select the phone number to which you want to add the voice command. Next, record a voice command such as “John mobile” for the phone number you selected.
- 3 Instructions appear. Lift the phone to your ear, wait for the tone and say the command. The recorded voice command is played back.
- 4 If the recording sounds ok ► Yes. If not ► No and repeat step 3.
- 5 To record another voice command for a contact ► New voice again and repeat steps 2-4 above.

Caller name

You can choose whether you want to hear the recorded contact name when you receive a call from that contact.

To turn the caller name on or off

- ▶ Settings ▶ the General tab ▶ Voice control
- ▶ Play caller name.

Voice dialling

You can voice dial by saying a pre-recorded voice command. Start voice dialling from standby using the phone, a portable handsfree, a Bluetooth headset or by saying your magic word.

To make a call from the phone

From standby, press and hold one of the volume buttons. Lift the phone to your ear, wait for the tone and say the name you recorded earlier. The name is played back and the call is connected.

To make a call with a handsfree

From standby, press the handsfree button, or Bluetooth headset button.

The magic word

You can record a magic word and use it as a voice command to allow totally handsfree access to voice dialling. Instead of pressing and holding a volume button to voice dial, say the magic word and then one of your recorded voice commands. The magic word is especially suitable when using a car handsfree kit.



Choose a long, unusual word or phrase that can easily be distinguished from ordinary background speech.

To activate and record the magic word

- ▶ Settings ▶ the General tab ▶ Voice control ▶ Magic word ▶ Activate.
- Instructions appear. ▶ **Continue** and lift the phone to your ear. Wait for the tone and say the magic word.
- Instructions appear. ▶ **Continue** and select the environments in which you want your magic word to be activated.

Voice answering

You can answer or reject incoming calls by voice when using a portable or car handsfree kit.



You cannot use voice answering if you have selected an MP3 file as ringtone.

To activate voice answering and record voice answer commands

- ▶ Settings ▶ the General tab ▶ Voice control ▶ Voice answer ▶ Activate.
- Instructions appear. ▶ **Continue** and lift the phone to your ear. Wait for the tone and say “Answer”, or another word. If the recording sounds ok ▶ **Yes**. If not ▶ **No** and repeat step 2.

- 3 Say “Busy”, or another word ► **Yes**.
- 4 Instructions appear. ► **Continue** and select the environments in which you want voice answering to be activated.

To answer or reject a call using voice commands

- When the phone rings, say “Answer” and the call is connected.
- When the phone rings, say “Busy” and the call is rejected. The caller is diverted to voicemail (if activated) or hears a busy tone.

Editing your voice commands

Keep all your voice commands up to date by re-recording them or deleting the ones not used. You can also edit a voice command for a phone number in the phonebook. Select the contact to edit a voice command for ► **More** ► **View & edit**. Scroll to the relevant tab and edit your voice command.

To re-record a voice command

► **Settings** ► the **General** tab ► **Voice control** ► **Voice dialling** ► **Edit names**. Select a voice command ► **More** ► **Replace voice**. Lift the phone to your ear, wait for the tone and say the command.

Tips when recording and using voice commands

If your phone cannot detect your voice command, one of the following might have happened:

- You spoke too softly – try speaking louder.
- You held the phone too far away – hold it as you do during a call.
- The voice command was too short – it should be about one second long and more than one syllable.
- You spoke too late or too soon – speak immediately after the tone.
- You did not record the voice command when the handsfree was attached – attach the handsfree and then record.
- You used another intonation – use the same intonation as the recorded voice command.

Diverting calls

If you cannot answer incoming calls, you can divert them to another number, for example, your answering service.



When the Restrict calls function is activated, some Divert calls options are not available.

Select from the following divert options:

- **Divert always** – divert all calls.
- **When busy** – divert calls if you are already on the phone.

Calling

- **Not reachable** – divert calls if your phone is turned off or if you are unreachable.
- **No reply** – divert calls that you do not answer within a specified time limit (operator-dependent).

To activate or deactivate a call divert

- 1 ▶ **Settings** ▶ the **Calls** tab ▶ **Divert calls**.
- 2 Select a call type and then one of the divert options **Activate** or **Deactivate**. If you have selected **Activate**, go to step 3.
- 3 Enter the phone number to which you want your calls to be diverted, or ▶ **Look up** to find the contact in your phonebook ▶ **OK**.

To check all divert options

- ▶ **Settings** ▶ the **Calls** tab ▶ **Divert calls** ▶ **Check all**.

More than one call

You can handle more than one call simultaneously. For example, you can put an ongoing call on hold while you make or answer a second call, and then switch between the two calls.

Call waiting service

If the call waiting service is activated, you hear a beep if you receive a second call during an ongoing call.

To activate or deactivate the call waiting service

- ▶ **Settings** ▶ the **Calls** tab ▶ **Manage calls**
▶ **Call waiting**.

To make a second call

- ▶ **Hold** to put the ongoing call on hold. Enter the number you want to call ▶ **Call**.

Receiving a second call

You can do the following:

- ▶ **Answer** to answer the second call and put the ongoing call on hold.
- ▶ **Busy** to reject the second call and continue with the ongoing call.
- ▶ **Replace active call** to end the ongoing call and answer the second call.

Handling two calls

When you have one ongoing call and one call on hold, you can do the following:

- ▶ **Switch** to switch between the two calls.
- Press  ▶ **Join calls** to join the two calls into a conference call.
- Press  ▶ **Transfer call** to connect the two calls. You are disconnected from both calls.

- ▶ **End call** to end the ongoing call, then press **Yes** to retrieve the held call.
- ▶ **End call** twice to end both calls.
- You cannot answer a third call without ending one of the first two calls or joining them into a conference call.

Conference calls

In a conference call, you can speak with up to five other people. You can also put a conference call on hold and make another call.

 *There may be additional charges for multiple-party calls. Contact your service provider for more information.*

Creating a conference call

To create a conference call, you must first have one ongoing call and one call on hold. In a conference call you can speak privately with one of the participants or release a participant.

To join two calls for a conference

Press  ▶ **Join calls**.

To add a new participant

- 1 ▶ Hold to put the joined calls on hold.
- 2 Press  ▶ **Add call** and call the next person you want to include in the conference call.

3 Press  ▶ **Join calls**.

4 Repeat steps 1-3 to include more participants.

To release a participant

Press  ▶ **Release part** and select the participant.

To have a private conversation

Press  ▶ **Talk to** and select the participant.

▶ **Join calls** to resume the conference call.

Two voice lines

 If you subscribe to an alternate line service, your phone may have two voice lines with different phone numbers. This may be useful if, for example, you want to keep business and private calls on separate lines. You select which line you want to use for outgoing calls. All outgoing calls are made on this line until you change it. Incoming calls can still be received on either line. You can change the line names, and have different settings for each line, such as different ringtones.

To select a line

▶ **Settings** ▶ the **Calls** tab and select line 1 or 2.

To change the name of a line

▶ **Settings** ▶ the **Display** tab ▶ **Edit line names** and select one of the lines to edit the name.

My numbers

You can view, add and edit your own phone numbers.

To check your phone numbers

- ▶ Phonebook ▶ Options ▶ Special numbers
- ▶ My numbers and select one of the options.

Accept calls

You can choose to receive calls only from certain phone numbers and reject calls from other numbers by a busy tone. If the call divert option **When busy** is activated, calls are diverted instead of rejected by a busy tone. The phone numbers of calls you have rejected are saved in the call list.

To add numbers to the accepted callers list

- ▶ Settings ▶ the Calls tab ▶ Manage calls ▶ Accept calls ▶ Only from list. ▶ Edit ▶ New ▶ Add. This takes you to phonebook look up. Select numbers from your phonebook.

To accept all calls

- ▶ Settings ▶ the Calls tab ▶ Manage calls
- ▶ Accept calls ▶ All callers.

Restricted dialling



You can use the restrict calls service to restrict outgoing and incoming calls. To use this service, you need a password from your service provider.



If you divert incoming calls, you cannot activate some Restrict calls options.

The following calls can be restricted:

- All outgoing calls – **All outgoing**.
- All outgoing international calls – **Outgoing intl**.
- All outgoing international calls except to your home country – **Outgoing intl roaming**.
- All incoming calls – **All incoming**.
- All incoming calls when you are abroad (when roaming) – **Incoming when roaming**.

To activate or deactivate a call restriction

- ▶ Settings ▶ the Calls tab ▶ Manage calls
- ▶ Restrict calls and select an option. Select **Activate** or **Deactivate**. Enter your password ▶ **OK**.

Fixed dialling

-  The fixed dialling function allows calls to be made only to certain numbers saved on the SIM card. The fixed numbers are protected by your PIN2.
-  *You can still call the international emergency number 112, even when the fixed dialling function is activated.*

Partial numbers can be saved. For example, saving 0123456 allows calls to be made to all numbers starting with 0123456.

-  *When fixed dialling is activated, you cannot view or manage any phone numbers that are saved on the SIM card.*

To activate or deactivate fixed dialling

► Phonebook ► Options ► Special numbers ► Fixed dialling and select **Activate** or **Deactivate**. Enter your PIN2 ► OK and then ► OK again to confirm.

To save a fixed number

► Phonebook ► Options ► Special numbers ► Fixed dialling ► Fixed numbers ► New number and enter the information.

Call time and cost

-  During a call, the duration of the call is shown on the screen. If you subscribe to cost information, you can check the duration of your last call, outgoing calls and total time. You can also check the cost of your last call and the total cost of your calls.
-  *If you subscribe to cost information, you must enter your PIN2 to reset the cost or time counter.*

To check or reset the call time

► Settings ► the Calls tab ► Time & cost ► Call timers. To reset the call time meter ► More and select **Reset total** or **Reset outgoing**.

To check or reset the call cost

► Settings ► the Calls tab ► Time & cost ► Call costs. To reset the call cost meter, ► More ► **Clear total cost**.

Setting the call cost

You can use the tariff function to specify the price per call unit. If you do not specify a price per call unit, the number of call units appears.

To enter the price per call unit

- 1 ► Settings ► the Calls tab ► Time & cost ► Call costs ► More ► **Set tariff**.
- 2 Enter your PIN2 ► OK.

Calling

- ▶ **Currency** and enter the code for the currency you want, (for example GBP for Pounds Sterling) ▶ OK.
- ▶ **Units** and enter the price per call unit ▶ OK.
To enter a decimal point, press .

Credit limit for calls

You can enter a total amount of money allowed for making calls. When the amount reaches zero, no more calls can be made. Please note that the credit limit is only an estimated value.

To set a credit limit

- ▶ **Settings** ▶ the **Calls** tab ▶ **Time & cost** ▶ **Call costs**
 - ▶ **More** ▶ **Set credit** and enter your PIN2 ▶ OK.
- Select **Limited** or **Unlimited**. If you select **Limited**, enter an amount ▶ OK.

Call priority service

 You can request a certain priority when you make a call, if you subscribe to the call priority service.

Priority levels are defined by your network operator and are normally 0-4, where 0 is the highest priority.

To check or change your standard priority level

▶ **Settings** ▶ the **Calls** tab ▶ **Manage calls** ▶ **Default priority**. The network sends available priority levels. Select a priority level.

To change the priority for one call

Enter the phone number you want to call. ▶ **More** ▶ **Call priority** and select a priority. The number is called.

Closed user groups

 The closed user group function is used to lower call costs. If you subscribe to closed user groups, it is cheaper on some networks to make calls within a call group. You can save ten groups.

To add a group

- ▶ **Settings** ▶ the **Calls** tab ▶ **Manage calls** ▶ **Closed groups** ▶ **Edit list** ▶ **New group** ▶ **Add**.
- Enter the name of the user group ▶ **Continue**.
- Enter the index number ▶ **Save**. You get the index number from your network operator.

To call outside a closed user group

► Settings ► the Calls tab ► Manage calls ► Closed groups ► Open calls ► On. When Off is selected, you can only call within the group.

Additional calling functions**Tone signals**

You can use telephone banking services or control an answering machine by sending tone signals (also known as DTMF tones or touch tones) during a call.

- To send the tones, press the keys **1** - **0**, ***** or **#**.
- To clear the screen after the call is finished, press **C**.
- To turn the tones on or off during a call, press **☉** and select Turn off tones or Turn on tones.

Notepad

You can note down a phone number during a call. When you end the call, the number remains on the screen. ► Call to call the number. ► More ► Save number and select a contact to save the number. To create a new contact and save the number ► New contact.

Showing or hiding your number

If you subscribe to the Calling Line Identification Restriction (CLIR) service, you can hide your phone number when making a call. You can do this per call, or select this as a default setting. ► More in standby to quickly change this default setting.

To show or hide your phone number

Enter the phone number you want to call.
► More and select Hide number or Show number.

To always show or hide your phone number

► Settings ► the Calls tab ► Show or hide number. Select Show number, Hide number or Network default.

Groups

You can create a group of numbers so that you can send text messages and picture messages to several recipients at the same time, ➤ 34 Messaging.

To create a group of numbers

- 1 ► Phonebook ► Options ► Groups ► New group ► Add.
- 2 Enter a name for the group ► Continue.

- ▶ **New number** ▶ **Add** to find the contact in your phonebook.
- Select a number from the contact.
- Repeat steps 3-4 to add more numbers to the group. ▶ **Done** to save the group.

Business cards

You can add your own business card to the phonebook. You can exchange business cards between your phone and another similar phone or a PC, using Bluetooth wireless technology, the infrared port, or a text or picture message.

To add your own business card

▶ **Phonebook** ▶ **Options** ▶ **My business card** and enter the information for your business card ▶ **Save**.

To send your business card

▶ **Phonebook** ▶ **Options** ▶ **My business card**
▶ **Send my card** and select a transfer method.

To receive a business card

When you receive the business card ▶ **Yes** to save the business card in the phonebook.

Messaging

Text messaging, picture messaging, email, My friends, messaging glossary.



Your phone supports various messaging services. Please contact your service provider for details on which services you can use. For more information about messaging, please visit www.SonyEricsson.com/support.

Text messaging

Text messages are sent via SMS (Short Message Service) and can contain pictures, animations, melodies and sound effects. Text messages can be sent to one person, several recipients or to a group of recipients saved in the phonebook, ▶ **33 Groups**.



If you send a text message to a group, you are charged for each member of that group.

Before you start

Make sure that the number of your service centre is set. The number is supplied by your service provider and is usually saved on the SIM card.

To set the service centre number

- 1 ▶ **Messaging** ▶ **Settings** ▶ **Text message**
▶ **Service centre**. If the service centre number is saved on the SIM card, it is shown in the list.
- 2 If there is no number in the list ▶ **Add** and enter the number, including the international “+” sign and country code ▶ **Save**.

For information about entering letters,

➡ 11 *Entering letters*.



Some language-specific characters use more space. For some languages you can turn off National chars. to save space, ➡ 13 Options when entering letters.

To write and send a text message

- 1 ▶ **Messaging** ▶ **Write new** ▶ **Text message**.
- 2 Write your message ▶ **Continue**. If you want to save the message for later, press  ▶ **Yes** to save it in **Drafts**.
- 3 ▶ **Enter phone number** and enter the recipient's phone number, or ▶ **Phonebook look up** to retrieve a number or a group from the phonebook. To enter an email address ▶ **Enter email address**. A list below the send options shows the last 10 recipients. You can also select a recipient from this list. ▶ **Send**.

To insert an item in a text message

While writing your message ▶ **More** ▶ **Add item**. Select **Picture**, **Sound effect**, **Melody**, **Animation**, **Templates** or **Picture (other)**. Select an item.

To format the text in a text message

While writing your message ▶ **More** ▶ **Text format**. Select **Text size**, **Text style**, **Alignment** or **New paragraph**. Select a text format.

Receiving text messages

When you receive a text message, a message alert sounds.

▶ **Yes** to read the text message or ▶ **No** to read it later. When you have read the text message ▶ **More** to view a list of options. Press  to close the text message.

To call a number in a text message

Select the phone number ▶ **Call**.

Saving received text messages

Text messages are saved in the phone memory. When the phone memory is full, you must delete messages or move them to the SIM card to be able to receive new messages. Messages saved on the SIM card remain there until you delete them.

To save a message to the SIM card

- ▶ Messaging ▶ Inbox ▶ More ▶ Save message
- ▶ Saved items.

To save an item from a text message

- 1 Select the phone number, Web address, picture or sound that you want to save in the message
▶ More.
- 2 If you have selected a phone number ▶ Use
▶ Save number. If you have selected a Web address ▶ Save bookmark, a picture ▶ Save picture, a sound ▶ Save sound.

Long messages

The maximum number of characters that a text message can contain depends on the writing language. You can send a longer message by linking two or more messages. Please note that you are charged for each of the messages linked in a long message. You may not receive all parts of a long message at the same time.



Check with your service provider for the maximum number of messages that can be linked.

To turn long messages on

- ▶ Messaging ▶ Settings ▶ Text message
- ▶ Maximum msg length ▶ Maximum available.

Templates

If you have one or more messages that you send often, you can save these as templates. Your phone has pre-defined templates, but you can also create your own.

To create a template

- ▶ Messaging ▶ Templates ▶ New template ▶ Text.
- Write the message ▶ OK. Enter a title for the message
▶ OK.

Message options

You can set a default value for several message options or choose the settings each time you send a message. You can, for example, select to request a reply to a sent message, select what type of text message you want to send or set how long a message should be valid. For details about the message options, ➤ 46 *Messaging glossary*.

To set a default text message option

- ▶ Messaging ▶ Settings ▶ Text message and select an option.

To set a message option for a specific message

When you have selected a recipient to send your text message to ► **More** ► **Advanced**. Select the option that you want to change ► **Edit** and select a new setting. ► **Done** when you have changed the options.

To check the status of a sent message

► **Messaging** ► **Sent items** and select a text message
 ► **View** ► **More** ► **View status**.

Picture messages

Picture messages can contain text, pictures, video clips, camera pictures, and sound recordings and are sent via MMS (Multimedia Messaging Service). Both you and the recipient of the picture message must have a subscription that supports MMS. Picture messages can be sent to a mobile phone or email account. You can send a business card as an attachment in a picture message.

Before you start

Before sending a picture message, make sure that:

- 1 The address to your message server is set
 ► **Messaging** ► **Settings** ► **Picture message**
 ► **Message server**.

- 2 You have entered the correct settings
 ► **Messaging** ► **Settings** ► **Picture message**
 ► **Internet profile**. Select a profile or **New profile**. To create an Internet profile, ► *61 Setting up Internet and email*. You can also download all the settings you need automatically from your network operator or from www.SonyEricsson.com/support.

Writing and sending picture messages

When composing a picture message, you can select different items such as **Picture**, **Text**, **Sound**, **Video**, **Camera picture**, **Video recording** and **Sound recording**.

Before sending a picture message, you can select different options to adjust and enhance your message. You can, for example, preview the entire message or a single page, change the timing for items in the message and add or replace items to be sent in the message. For details about options, ► *46 Messaging glossary*.

To write and send a picture message

- 1 ► **Messaging** ► **Write new** ► **Picture message**.
 ► **Add** to view a list of items to add to your message. Select an item.

Messaging

- ▶ **Add** to add more items to the message. You can view and select options by highlighting items in the message and pressing the left selection key.
- When you have finished writing your message ▶ **More** ▶ **Send**.
- ▶ **Enter phone number** and enter the recipient's phone number, or ▶ **Phonebook look up** to retrieve a number or a group from the phonebook. To enter an email address ▶ **Enter email address**. A list below the send options shows the last 10 recipients. You can also select a recipient from this list. ▶ **Send**.

To make a call while writing a picture message

While writing your message ▶ **More** ▶ **Make a call** and enter or retrieve a phone number ▶ **Call**. You return to the message. To end the call ▶ **More** ▶ **End call**.

To set a default message option

▶ **Messaging** ▶ **Settings** ▶ **Picture message** and select one of the options.

Additional send options

You can request a read report, a delivery report and set a priority for a specific message. You can also add more recipients to the message. For details about

the additional send options, ➡ *46 Messaging glossary*.

To select additional send options

When you have entered the recipient's phone number ▶ **More**. Select **Add recipient** or **Recipients** to add more recipients, or **Advanced** to select an additional send option or **Add attachment**.

Receiving picture messages

When you receive a picture message, a message alert sounds.

▶ **Yes** to read or play the message. Press **Stop** to stop the message. When you have read the message ▶ **Reply** to reply immediately or ▶ **More** to view a list of options. Press  to close the message.



You can select a message from the list of messages and press  to delete the entire message.

Save items from a picture message

When you have viewed a picture message ▶ **More** ▶ **Save items** and select an item to save from the list that appears.

Delete picture messages

Picture messages are saved in the phone memory. When the phone memory is full, you must delete messages to be able to receive new messages.

To delete a message

- 1 ▶ **Messaging** and select a folder.
- 2 Select the message ▶ **More** ▶ **Delete**.

To delete several messages

- 1 ▶ **Messaging** and select a folder.
- 2 Select a message ▶ **More** ▶ **Mark several**.
- 3 Scroll and select more messages by pressing **Mark** or **Unmark**.

To delete all messages

- ▶ **Messaging** and select a folder ▶ **More**
▶ **Delete all msgs**.

Templates

You can base your message on one of the predefined templates. You can also add new templates.

To use a predefined template

- ▶ **Messaging** ▶ **Templates** and select a template.
▶ **Use** ▶ **Picture message**. ▶ **Add** to make changes or add new items. ▶ **More** ▶ **Send** to send the message.

Automatic download

You can select how you want your picture messages to be downloaded.

- ▶ **Messaging** ▶ **Settings** ▶ **Picture message**
▶ **Auto download** to view the following:
- **Always** – your phone automatically downloads messages as soon as they come to your network operator's server. This is the default.
 - **Ask in roaming** – you will be asked if you want to download messages when you are using a network other than your network operator's.
 - **Never in roaming** – the messages are never downloaded when you are using a network other than your network operator's.
 - **Always ask** – you will always be asked if you want to download messages, regardless of the network.
 - **Off** – new messages appear in the inbox as icons. Select the message ▶ **View** ▶ **Yes** to download.

Email

You can use your phone to send and receive email messages. Please note that you need a subscription that supports data transmission. For more information, contact your service provider.

Before you start

- Set up a data account, ➡ *61 Entering Internet and email settings.*
- Set up and select an email account.

Email account settings

An email account specifies, for example, the server that is used for your email messages. There are three ways to create an email account:

- Download settings from the Internet
- Send a request in a text message
- Create an email account manually

Receiving settings

Go to www.SonyEricsson.com/support for information on how to enter your email settings. Some network operators provide a service you can use to request settings in a text message. Contact your network operator for information.

To request settings in a text message

► Messaging ► Email ► Settings.

To create an email account manually

- 1 ► Messaging ► Email ► Settings ► New account.
- 2 Enter a name for the account, for example “Home” or “Office” ► Connect using.

- 3 Select the data account that you want to use with this email account.
- 4 Enter the rest of the settings, some of which are optional. To enter the settings, scroll to the setting ► Select. Enter the information ► OK to confirm. Repeat this for each required setting. Your phone uses the same email settings as your PC email program. If you do not have an email service, contact your network operator to get all the necessary settings. For details about the settings, ➡ *46 Messaging glossary.*

Default email account

If you have both an office and a home email account, you can set one of them as default ► Messaging ► Email ► Settings and select an account.

Writing and sending email messages

When writing and sending your email message, you can select from several options to accompany your message. For details about the options, ➡ *46 Messaging glossary.*

► Messaging ► Email ► Inbox ► Send&rec (when inbox is empty) or ► Messaging ► Email ► Inbox ► More ► Send & receive offers the fastest way to send, or check for, new email messages.



The number of email messages that can be saved depends on the memory left in the phone. All email messages are also saved on your email server, and you can view both older and newer messages on the server.

To write and send an email message

- 1 ▶ **Messaging** ▶ **Email** ▶ **Write new**.
- 2 Write the subject for your message ▶ **OK** and then the text ▶ **OK**.
- 3 ▶ **Enter email address** to enter an email address or ▶ **Phonebook look up** to retrieve an address from your phonebook.
- 4 ▶ **Send** to send your email message or ▶ **More** to view a list of options for your message.

To receive and read email messages

▶ **Messaging** ▶ **Email** ▶ **Inbox** ▶ **More** ▶ **Send & receive** to download new messages. Select a message to read it.

To reply to an email message

- 1 Open the email message ▶ **Reply**.
- 2 Write your message. ▶ **More** to view options for the message.
- 3 ▶ **Send** to send the message.

To save an email address or a phone number in an email message

Select the email address or phone number that you want to save ▶ **More**. To save an email address ▶ **Use** ▶ **Save email**. To save a phone number ▶ **Save number**.

To save an email message

Open the email message ▶ **More** ▶ **Save message**. The message is saved in **Saved items** in the **Email** menu.

To save several email messages

- 1 ▶ **Messaging** ▶ **Email**.
- 2 Select a message ▶ **More** ▶ **Mark several**.
- 3 Scroll and select more messages by pressing **Mark** or **Unmark**.
- 4 ▶ **More** ▶ **Save messages**.

To delete an email message (POP3 users)

▶ **Messaging** ▶ **Email** ▶ **Inbox** and select the message ▶ **More**. Select **Mark for deletion**. The message is deleted the next time you connect to your email server.

To delete an email message (IMAP4 users)

- 1 ▶ **Messaging** ▶ **Email** ▶ **Inbox** and select the message ▶ **More**.
- 2 ▶ **Mark for deletion**. The message is marked for deletion on the server.
- 3 ▶ **More** ▶ **Clear inbox**. The message is deleted the next time you connect to your email server.

My friends



The My friends function gives you more messaging options. You can create a list of favourite contacts, either from the phonebook or from the My friends server. You can see which of your contacts are online and what mood they are in. To see contacts online, they have to be connected to the My friends server. You can also send and receive instant messages and join community chats. Please contact your network operator for information about your subscription and My friends settings.

My friends contacts

You can add contacts from the phonebook to a list in My friends, even if you do not have a My friends account and are not connected to the My friends server. You can then quickly access your favourite contacts and choose how you want to communicate with them.

Log in to the My friends server

You can select to log in to your My friends server each time you want to send or receive instant messages, or you can be logged in automatically when you turn on your phone. To set automatic log in and edit your account settings you have to be logged out from the My friends server.

To log in to your My friends server

▶ **Messaging** ▶ **My friends** ▶ **Myself** ▶ **Log in**.

To set automatic log in

▶ **Messaging** ▶ **My friends** ▶ **Myself** ▶ **More**
▶ **Accounts** ▶ **Edit** ▶ **Auto-login**: ▶ **On**.

To edit the My friends account

- 1 ▶ **Messaging** ▶ **My friends** ▶ **Myself** ▶ **More**
▶ **Accounts**.
- 2 ▶ **Edit** and edit your settings.

List of contacts

You can create a list of contacts - people you want to send messages to on a regular basis. You can add contacts from your phonebook or from your My friends server.

To add a contact from the phonebook

- 1 ▶ **Messaging** ▶ **My friends** ▶ **More** ▶ **Add contact** ▶ **From Contacts**.
- 2 Enter the first letter of the contact and then select a contact.
- 3 When you have selected a contact, you can choose to subscribe to status information for that contact. To subscribe ▶ **Yes** and follow the instructions that appear. ▶ **No** if you do not want to subscribe.

To add a contact from a network server

- ▶ **Messaging** ▶ **My friends** ▶ **More** ▶ **Add contact** ▶ **From server** and follow the instructions that appear.

Status

You can view the status of your contacts and choose to show your own status to others. You can also change your own status with the help of the following options:

- **Picture** – select a picture from **Pictures** or take a picture with the camera. You can change or remove pictures.
- **About me** – write a short text about yourself.
- **Availability** – select what to show others when you are online, **Available**, **Busy**, **Away**, or **Invisible**.

If you select **Invisible**, you will appear offline to others.

- **Mood** – select a mood from the list.
- **Show my status** – ▶ **To all** if you want to show full status to friends but limited status to others, and ▶ **Only to contacts** if you want to show full status to friends but nothing to others.
- **Username:** – view your username.

To view the status of a contact

- ▶ **Messaging** ▶ **My friends** and select a contact
▶ **More** ▶ **View status**.

To change your own status

- ▶ **Messaging** ▶ **My friends** ▶ **Myself** ▶ **Change status** and edit your status according to the options.

To send a message from My friends

- ▶ **Messaging** ▶ **My friends** and select a contact. If the contact is linked to your phonebook ▶ **More** ▶ **Send instant msg** ▶ **Send**. If not, select the contact ▶ **Send IM**.

Receiving a message

When you receive a message, a message alert sounds or an icon appears in the status bar.

Contact list

You can create nicknames for the contacts in your list that are connected to the My friends server. You can also link a contact to the phonebook, and get access to information saved in the phonebook.

To enter a nickname

► **Messaging** ► **My friends**, and select a contact.
► **More** ► **Manage contact** ► **Edit nickname**. Enter the nickname for that contact ► **Save**.

To link a contact to the phonebook

► **Messaging** ► **My friends** and select a contact.
► **More** ► **Manage contact** ► **Link to Contacts** and select a phonebook contact.

Strangers

A stranger is someone who is not in your list of contacts. An icon indicates a message from a stranger. You can block a contact or stranger so that they cannot view your status or send you messages.

You can also add the stranger to your list of contacts or block them. If you do not do either, the stranger disappears when you log out from the My friends server.

To block or unblock a contact

► **Messaging** ► **My friends** and select a contact.
► **More** ► **Manage contact**. Select **Block contact** or **Unblock contact**.

To block a stranger

► **Messaging** ► **My friends** and select the stranger
► **More** ► **Block user**.

To add a stranger to contacts

► **Messaging** ► **My friends** and select the stranger
► **More** ► **Add as contact**.

Chatroom

A chatroom can be started by your service provider, by an individual My friends user or by yourself. You can save chatrooms either by saving a chat invitation or by searching for a specific chatroom.

To receive a chat invitation

- 1 When a message alert sounds and **New chat invitation received** is displayed, select **View** to view the invitation or **Discard** to discard the invitation.
- 2 If you have selected to view the invitation, and want to join the chat ► **Join chat**. If you want to discard the invitation now ► **More** ► **Discard invitation**.

When you receive an invitation, ► **View** ► **More**
► **Save chatroom**.

To search for a chatroom

- 1 ► **Messaging** ► **My friends** ► **More**
► **Add chatroom** ► **No**.
- 2 Enter your search criteria in one or several of the fields ► **Search**.
- 3 When you have found the chatroom you want to save ► **Add**.

To join a chatroom

- **Messaging** ► **My friends** and select a chatroom
- **Join chat**.

To start a chatroom

- 1 ► **Messaging** ► **My friends** ► **More**
► **Start chatroom**.
- 2 Select contacts to invite to the chatroom from your list of contacts ► **Continue**.
- 3 Enter a short invitation text to the chatroom
► **Continue** ► **Send**.

Online contact alert

You can select to be notified by an icon when a contact comes online. When you log off, or when the contact has come online, the notification is cleared.

To set an online contact alert

- **Messaging** ► **My friends** and select a contact
- **More** ► **Manage contact** ► **Alert me**.

Area information

Area information is a type of text message (for example, a local traffic report) that is sent to all subscribers within a certain network area. When you receive an area information message, it automatically appears on the screen. Press **Save** to save the message in your inbox, or **Discard** to delete the message.



Please consult your service provider for more information about area information.

To turn area information on or off

- **Messaging** ► **Settings** ► **Area info** ► **Reception**.

Cell information

The cell information channel is used by some network operators to send messages about a certain network area to their subscribers within that area.

To turn on the cell information channel

► Messaging ► Settings ► Area info ► Cell information.

Messaging glossary

Options and settings for text, picture and email messages are listed below:

- **Accept messages** – select which messages you want to accept and download.
- **Add attachment** – add, for example, pictures, sounds, themes, video clips, business cards or recordings to a message.
- **Check interval** – select how often you want the phone to connect to your email server and check for incoming email messages.
- **Connect using** – select which data account to use when connecting to a specific email account.
- **Copy outgoing** – select if you want email messages sent from your phone also to be sent to an email address of your choice. This way,

your sent messages are copied and can be saved for future reference.

- **Creation mode** – select settings for what to allow in picture messages. Some content in picture messages might be difficult for the recipient to view.
- **Delivery report** – request a status report to check if a message has been delivered.
- **Download** – select whether to receive headers and text or headers only in email messages.
- **Incoming port** – if needed, change the number of the port used by the protocol you are using.
- **Incoming server** – enter the name or IP address of the service provider for incoming email messages. For example, mail.server.com or 10.1.1.1.
- **Mailbox** – enter a username for your email account.
- **Outgoing port** – if needed, change the number of the port used by the SMTP protocol.
- **Outgoing server** – enter the name or IP address of the SMTP server to be able to send email messages.
- **Password** – enter a password for your email account. Your service provider may alternatively request a password on connection.

- **Picture** – add a picture, or replace with an alternative, from the **Pictures** folder.
- **Preview** – view the entire picture message before sending it.
- **Preview page** – view a specific page in the picture message, without having to play the entire message.
- **Protocol** – select **POP3** or **IMAP4**.
- **Request reply** – include a reply request if you want the recipient of your message to reply.
- **Save in Drafts** – save the email message in the **Drafts** folder.
- **Save in Outbox** – save the email message in the **Outbox** folder.
- **Set priority** – set the message priority, select High, Normal or Low.
- **Signature** – select if you want to add your business card to your email messages.
- **SMS type** – the phone supports different types of messages. Your service provider may offer the facility of converting a text message into a format (email or fax, for example) that suits the equipment that is going to receive the message.
- **Sound** – add a sound, or replace with an alternative, from the **Sounds** folder.
- **Subject:** – write a title for your message.
- **Timing** – set how many seconds you want an item in a message to be displayed.
- **Validity period** – if your message cannot be delivered, for example, if the recipient has turned off the phone, your service centre can save the message to send it later.
- **Video** – add a video clip, or replace with an alternative, from the **Videos** folder.

Imaging

Camera, video recorder, pictures, screen saver.

Camera and video recorder

 Your phone has a digital camera and digital video recorder. You can take pictures, record video clips, view them and send them as email attachments or in picture messages via MMS (Multimedia Messaging Service). To do this, you must subscribe to these services. Please check with your network operator.

You can also use a picture as a screen saver or wallpaper, or save it together with a contact in your phonebook so that the picture appears when that person calls, ➔ *21 To add a picture or a personal ringtone to a contact.*


Before you start

The phone that you are sending the picture or video clip to must support data transmission and picture messaging in order to receive and show the data.

Before you send a picture or video clip using MMS, make sure that Internet settings are entered in your phone, ➔ *61 Setting up Internet and email.*


Before you send a picture or video clip using email, make sure that you have entered settings for your data and email accounts in your phone.

To activate the camera

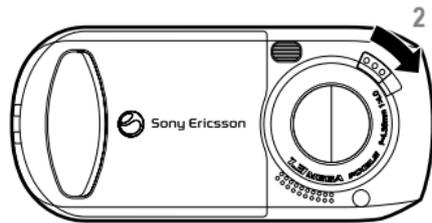


- 1 Close the phone.
- 2 While in standby, slide the lens cover lock to open the cover.

Keys used in camera or video recorder mode

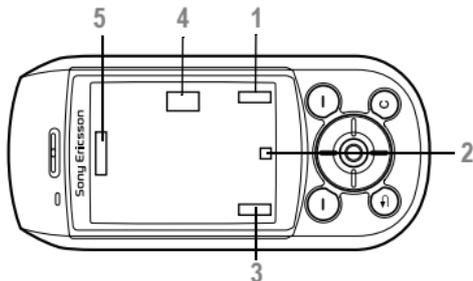

- 1, 3** Areas used for displaying functions such as **View**, **Settings**, and **Select**. To select the function displayed in these areas, press the relevant selection key.
- 2** Two types of icons are displayed in this area, one for showing or hiding all icons on the screen and the other for viewing recorded video clips. To select the function of a displayed icon, press .
- 4** The left or right arrow is displayed. Use the navigation key to switch between camera and video recorder.
- 5** The up and down arrows are displayed. Use the navigation key to zoom in and zoom out.

To take pictures and video clips

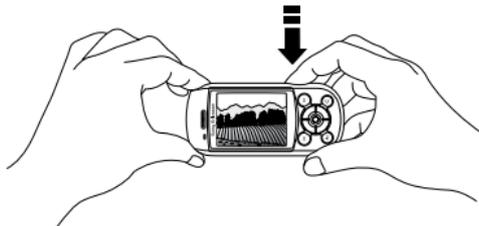

- 1** Press  to take a picture or start recording.
- 2** Use the navigation key to switch between the camera and video recorder.
- 3** To end video recording, press  again. To deactivate the camera, close the lens cover or press .

 *If you try to record a strong light source such as direct sunlight or a lamp, the screen may black out or the picture may be distorted.*

To use the zoom

Press  to zoom in on the subject. To zoom continuously, press and hold .

To adjust brightness

Use the volume buttons on the side of the phone to increase or decrease brightness.

To turn on the photo light

To take pictures in a dimly lit environment, slide the lock/light switch to turn on the photo light. To turn off the photo light, slide the switch again.

To show or hide icons

To show or hide icons on the screen, press .
(Camera mode only)

Camera options

When the camera is activated, ► **Settings** to view more options.



All phones that support pictures can receive the picture size 160x120. Some phones cannot receive picture sizes of more than 160x120. The best picture sizes to view on a PC are 1280x960 and 640x480.

Options before you take a picture:

- **Shoot mode** – select from **Normal** for no frame, **Burst 4** to take four pictures in rapid succession, and **With frame** to add a frame to your picture.
- **Picture size** – choose between 1280x960, 640x480, 320x240 and 160x120 pixels.

- **Night mode** – enhance picture quality with longer exposure time.
- **Self-timer** – the picture is taken a few seconds after activation.
- **Effects** – select different effects for your picture.
- **Light** – turn on to enhance lighting conditions.
- **White balance** – adjust the picture colour balance according to the lighting conditions.
- **Spot photometry** – adjust the exposure with reference to the centre of the subject of the picture.
- **Shutter sound** – select different shutter sounds.
- **Auto camera off** – the camera mode is deactivated a short time after you last press a key.
- **Reset file number** – reset file numbers of the Memory Stick Duo.
- **Save to** – select **Memory Stick** or **Phone memory** to save the picture.

Video options

When the video recorder is activated ► **Settings** to view more options.

- **Video size** – choose between 176x144 and 128x96 pixels.
- **Self-timer** – the video clip is recorded a few seconds after activation.

- **Effects** – select different effects for your video clips.
- **Light, White balance, Spot photometry, Auto camera off** – same as the camera options, ➤ *50 Camera options.*
- **Video length** – choose between **Limited** and **Unlimited** recording length.
- **Save to** – select **Memory Stick** or **Phone memory** to save the video clips.

Take a self-portrait

Hold the phone so that you can see your reflection in the mirror next to the lens. Press  to take the picture.

Saving pictures and video clips

When you take a picture or record a video clip, the phone saves it in the phone memory or on the Memory Stick Duo.

If the Memory Stick Duo is full, you cannot save any more pictures or video clips on the Memory Stick Duo unless you delete a saved item, ➤ *14 File manager.*

Sending pictures and video clips

When you take a picture or record a video clip, you can send them instantly in a picture message. To exchange pictures and video clips using other transfer methods, ➤ *53 Exchanging pictures.*

To send a picture

After taking a picture ► **Send** and create your picture message.

To play and send video clips

When you have finished your recording, press  to view the video clip or ► **Send** and create your picture message to send the video clip.

Pictures

Your phone comes with a number of pictures. You can delete these pictures if you want to free memory. All pictures are saved in **File manager** ► **Pictures**. You can:

- Use a picture as wallpaper and as screen saver.
- Assign a picture to a contact in the phonebook, ➤ *21 To add a picture or a personal ringtone to a contact.*
- Exchange pictures using Bluetooth wireless technology, the infrared port, cable, picture messages or email.

Animations

You can save animations in your phone. Animations are handled like pictures.

Handling pictures

You can add, edit, or delete pictures in **File manager**. The number of pictures that you can save depends on the size of the pictures. File types supported are GIF, JPEG, WBMP, PNG and BMP.

To view your pictures

► **File manager** ► **Pictures**. The pictures are shown in thumbnail view. To get a full view ► **View**.

To display pictures in a slide show

You can view your pictures automatically using the slide show function. ► **File manager** ► **Pictures** and select a folder or picture ► **More** ► **Slide show**. Rotate the picture between **Horizontal** and **Vertical** ► **Start**. To pause ► **Pause**. To resume ► **Resume**. To stop ► **Exit**.

To view information about a picture or a video clip

To display information about a picture or video clip, ► **File manager** ► **Pictures** or **Videos** and select the picture or video clip ► **More** ► **Info**.

Editing pictures

When editing pictures press , , ,  or use the keys as follows:

 <i>exit the picture editor</i>	 <i>undo</i>	
 <i>left up</i>	 <i>up</i>	 <i>right up</i>
 <i>left</i>	 <i>activate tool</i>	 <i>right</i>
 <i>left down</i>	 <i>down</i>	 <i>right down</i>
 <i>select tool</i>	 <i></i>	 <i>select colour</i>

To edit and save a picture

- **File manager** ► **Pictures** and scroll to the picture you want ► **More**.
- **Use** ► **Edit**. To edit pictures taken with the camera, you must select 160x120 or 320x240 as picture size. To rotate the picture, ► **Use** ► **Rotate**.
- **More** ► **Save picture** to save the picture.

Exchanging pictures

You can exchange pictures using Bluetooth wireless technology, the infrared port, cable, picture messages or email. Please note that you are not allowed to exchange copyright-protected material. For more information on sending pictures in messages,

➡ *34 Messaging.*

To send a picture

▶ **File manager** ▶ **Pictures** and scroll to the picture you want ▶ **More** ▶ **Send**. Select a transfer method.

To receive and save a picture

- 1 Open the message you received the picture in, or turn on Bluetooth or the infrared port if one of these transfer methods is being used.
- 2 If you received the picture in a message, select the picture and save it. If you received the picture via Bluetooth or infrared, follow the instructions that appear on the screen.

Remote screen

You can view your pictures on a remote screen, for example, a TV, using Bluetooth wireless technology and an adaptor. You can then use the phone to control the screen. Use the slide show function to show several pictures in succession.

To connect to a remote screen

▶ **File manager** ▶ **Pictures** and select a picture ▶ **More** ▶ **Remote screen**. The phone searches for other Bluetooth devices and a list of available devices is displayed. Select the device you want to use. For more information about connecting using Bluetooth,

➡ *65 Bluetooth™ wireless technology.*

Screen saver and wallpaper

The phone has a screen saver that is activated automatically when the phone has been idle for a few seconds. After a few more seconds, the screen saver changes to sleep mode, to save power. If you have a picture as wallpaper, this picture is shown in standby mode.

To use a picture as a screen saver

▶ **Settings** ▶ the **Display** tab ▶ **Screen saver** ▶ **Picture**. Select the picture you want to use as a screen saver.

To set a picture as wallpaper

▶ **Settings** ▶ the **Display** tab ▶ **Wallpaper** ▶ **Picture**. Select the picture you want to use as wallpaper.

Entertainment

Media player, sounds, themes, games.

Media player

The media player can play back both music and video. You can play music and video clips that you receive in a picture message or download to your phone. The following formats are supported by the media player: MP3, MP4, 3GP and WAV (maximum sample rate 16 kHz).

You can also stream music and videos from Web sites. When streaming, links have to be 3GPP compatible.

Music and video clips

You can play back music and video clips saved in your phone. The music list keeps on playing until you press **Stop**.

To play music

▶ **Media player** and select a file ▶ **Play**.

To view a video clip

▶ **Media player** ▶ **More** ▶ **Play video** and select the video clip you want to view.

Media player control

- ▶ **Pause** to pause the playback.
- Press and hold ⏮ and ⏭ to rewind and fast forward when playing music tracks.
- Press ⏪ and ⏩ to move up in the music list.
- Press ⏴ and ⏵ to move down in the music list.

Media player options

- ▶ **More** to view the following options:
 - **Play video** – play videos.
 - **Play music** – play music.
 - **Information** – view information about the current track or video.
 - **Delete song/Delete video** – delete the file from the phone or Memory Stick Duo.
 - **Equalizer** – change the treble and bass settings when playing music.
 - **Minimize** – minimize the media player and return to standby. The music continues to play and you can use other applications and functions in the phone.
 - **Send song/Send video** – send a sound or video file using Bluetooth wireless technology, the infrared port, text or picture messages or email.
 - **Random** – change the playback order of songs, in order or randomized.

Online music and videos

You can view videos and listen to music on a Web site by streaming them to your phone. When you select a link for streaming, the media player opens automatically. Links for streaming can be saved as bookmarks in the phone. In order to stream, you must create a data account, ➤ *61 Setting up Internet and email.*

To stream saved music and videos

► Internet services ► More ► Bookmarks.

Select a link to stream.
link to stream.

PlayNow™



This function is network- or operator-dependent. Please contact your network operator for information about your subscription and Internet settings to use PlayNow™.

With the PlayNow service, you can pre-listen to music tones before you download them into your phone. Each music tone is optimized for your Sony Ericsson mobile phone.

Before you start

First make sure that:

- You have a phone subscription that supports GPRS data transmission.
- You have entered the correct settings in your phone. You can receive Internet settings in a text message from your network operator or service provider. Settings are also available at *www.SonyEricsson.com*.
- You may also have to register as a WAP user with your service provider or network operator.
- Free memory in your phone.

Accessing the PlayNow music tone list

By selecting the PlayNow icon, you download the PlayNow music tone list to your phone. You can now listen to a music tone in the list.

To listen to a music tone

► PlayNow and select a music tone that you want to listen to.

To download a music tone

When you have listened to a music tone that you want to download, ► Yes to download the music tone. The music tone is automatically saved in File manager
► Sounds.

 *The service may not always be available in all countries or when you are using a network other than your network operator's – a message will appear to inform you about this when selecting the PlayNow icon.*

Ringtones and melodies

Your phone comes with a number of standard and polyphonic melodies that can be used as ringtones. You can exchange melodies via Bluetooth wireless technology, infrared port or cable. Please note that exchanging copyright-protected material is prohibited.

 *If you select an MP3 file as ringtone, you cannot use voice answering, ➤ 26 Voice answering.*

To select a ringtone

▶ Settings ▶ the Sounds & alerts tab ▶ Ringtone.

To turn the ringtone on or off

Press and hold  from standby. All signals except the alarm signal are turned on or off.

To set the ringtone volume

▶ Settings ▶ the Sounds & alerts tab ▶ Volume and press  or  to decrease or increase the volume.
▶ Save to save the setting.

Caller-specific ringtones

If your subscription includes the Calling Line Identification (CLI) service, you can assign a personal ringtone to callers, ➤ 21 To add a picture or a personal ringtone to a contact.

Vibrating alert

You can choose to be notified of an incoming call by the buzzing of the vibrating alert. You can set:

- **On** – all the time.
- **On if in Silent** – when the ring volume is turned off or when you have set the phone to silent.
- **Off** – all the time.

To set the vibrating alert

▶ Settings ▶ the Sounds & alerts tab ▶ Vibrating alert and select the setting you want.

Sounds and alerts options

From Settings ▶ the Sounds & alerts tab, you can set:

- **Message alert** – select how you want to be notified of an incoming message.
- **Key sound** – select what sound you want the keys to make when you press them.

Composing

You can compose and edit melodies using MusicDJ™. A melody consists of four tracks – **Drums, Bases, Chords and Accents**. A track contains a number of music blocks. The blocks are grouped into **Intro, Verse, Chorus, and Break**. You compose a melody by adding music blocks to the tracks.

To compose a melody

► **Entertainment** ► **MusicDJ™**. Choose **Insert**, **Copy** and **Paste** blocks to compose your melody. Use ,  or  to move between the blocks. Press  to delete a block. ► **More** to view more options.

To edit a previously created melody

► **File manager** ► **Sounds** and select the melody
► **More** ► **Use** ► **Edit**.

Sending and receiving

You can send and receive melodies using Bluetooth wireless technology, the infrared port, email or text or picture messages.



You cannot send a polyphonic melody or MP3 file in a text message.

To send a melody

► **File manager** ► **Sounds** and select a melody.
► **More** ► **Send** and select a transfer method.

To receive a melody

Open the message you received the melody in, or turn on Bluetooth or the infrared port if these transfer methods are being used to send the melody. When you receive the melody, follow the instructions that appear on the screen.

Sound recorder

With the sound recorder, you can record either your own memos or calls. Recorded sounds can also be set as ringtones. Recording of a call conversation is stopped if a participant ends the call. Recording of a sound stops automatically if you receive a call. Recordings are automatically saved on the Memory Stick Duo or in the phone. If the recordings are saved in the phone, they can be accessed even if you change your SIM card.



In some countries or states, it is required by law that you inform the other person before recording the call.

To start a sound recording

► **Entertainment** ► **Record sound**. Wait until you hear a tone. When the recording starts, **Recording** is displayed together with the time of the current recording (increasing).

► **More** to view the following options:
Record new, Send, Rename, Delete, Recorded sounds.

To end and play a sound recording

► **Save** to end the recording, and ► **Play** to listen to the recording.

To listen to your recordings


- 1 ► **File manager** ► **Sounds** and select the recording you want to hear.
- 2 ► **Play** to listen to the recording. Press  and  to go to the previous or next recording.
► **Stop** to stop playback.

Radio

Your phone features an FM radio. To use the radio, you must connect the portable handsfree. The handsfree functions as an antenna.

 *You must switch your phone on to use the radio. Do not switch the phone on in areas where mobile phones are prohibited, ► 80 Guidelines for Safe and Efficient Use.*

To listen to the radio

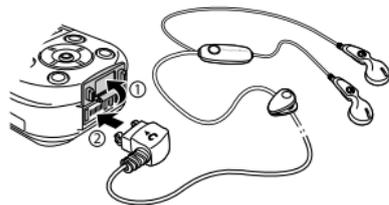

Connect the portable handsfree to the phone ► **Radio**.

Radio control

When the radio is on:

- ▶ **Search** or press and hold  or  to find the next channel on the FM band.
- Press  or  to move 0.1 MHz along the FM band.
- Press  or  for the next preset channel.

Saving radio channels

You can save up to 20 of your favourite radio channels.

 *To save channels quickly in positions 1 to 10, press and hold 0–9, (where 0 represents the number 10). To select a channel you have saved in positions 1 to 10, press 0–9.*

To save a radio channel

▶ **Radio** ▶ **More** ▶ **Save** ▶ **Insert**. The channel is saved in a list.

More options

- ▶ **More** for the following options:
 - **Minimize** – return to standby to use other functions with the radio still playing.
 - **Save** – save the current frequency in a list of channels.

- **Channels** – select, add, edit or delete saved channels.
- **Turn on speaker** – send the sound through the loudspeaker.
- **Set frequency** – enter a frequency manually. The values you enter will be automatically adjusted to valid frequencies. Press  to go directly to **Set frequency**.
- **Auto save** – automatically search for and save channels in a list of channels. Previously saved channels will be replaced.
- **Turn on Mono** – turn mono sound on.

While listening to the radio

You can minimize the radio display and listen to the radio while you make and receive calls, send messages and play games.

To minimize the radio display

▶ **Radio** ▶ **More** ▶ **Minimize**.

To adjust the volume

Press the volume buttons on the side of the phone.

Themes

You can change the appearance of the screen by selecting themes. Your phone comes with some predefined themes. You cannot delete these, but you can create new themes and download them to your phone. For more information, visit www.SonyEricsson.com/support.

To select or change a theme

► **File manager** ► **Themes** and select a theme.

Exchanging themes

You can exchange themes using Bluetooth wireless technology, the infrared port or email. Please note that exchanging copyright-protected material is prohibited.

To send a theme

► **File manager** ► **Themes** and select a theme ► **More** ► **Send**. Select a transfer method.

To receive and save a theme

Open the message you received the theme in or turn on Bluetooth or the infrared port if these transfer methods are being used to send the theme. When you receive the item, follow the instructions that appear on the screen.

To download a theme

► **File manager** ► **Themes** and scroll to a direct link
► **Go to**.

Games

Your phone has several games. You can also download games and applications directly to your phone. Help texts are available for most games.

To start and end a game

► **Entertainment** ► **Games** and select a game ► **Start**.
► **More** to read help texts. Press  to end the game.

To download a game

► **Entertainment** ► **Games** and scroll to a direct link
► **Go to**.

Connectivity

Internet and email settings, synchronizing, Bluetooth™ wireless technology, infrared.

Internet

Setting up Internet and email

 To use the Internet and send and receive picture and email messages, you need to:

- Subscribe to data transmission services.
- Enter settings in your phone.
- Register as an Internet and email user with your service provider or network operator.

Entering Internet and email settings

Settings may already be entered when you buy your phone. If not, you can enter the settings in different ways:

- You can receive settings in a text message from your network operator or service provider. Settings are also available at www.SonyEricsson.com/support.
- You can enter settings using the setup wizard.
- You can enter or edit settings manually.

 *Some settings are not mandatory. Please consult your network operator or service provider for more information. You can also visit www.SonyEricsson.com/support for more information about setting up Internet.*

Receiving settings in a text message

Your network operator or Internet service provider may be able to send the required information directly to your phone in a text message.

Requesting settings from Sony Ericsson

Use a PC to go to www.SonyEricsson.com/support to request that a text message with the settings be sent to your phone.

Setting up with the wizard

If your phone is not set up for Internet, you can ask your network operator or service provider to provide you with Internet settings information. Then you can simply use the wizard in your phone to help guide you through the relevant settings.

 *The wizard is automatically turned on if your phone has no Internet settings and you start the browser.*

Using Internet

Your phone has a browser that uses WAP (Wireless Application Protocol) or HTTP (Hyper Text Transfer Protocol) to access the Internet.

To select an Internet profile

► **Connectivity** ► **Internet settings** ► **Internet profiles** and select the profile you want to use.

To start browsing

Scroll to your online service or operator menu, and select a service.

To stop browsing

► **More** ► **Exit browser**.

Options when browsing

► **More** to view different browsing options.



If you select an email address when browsing a Web site, you can send a text message to that address.

The options menu always contains the following:

- **Exit browser** – disconnect and go to standby.
- Go to the current homepage, for example, Sony Ericsson.
- **Bookmarks** – add the site you are browsing to your list of bookmarks or folders, or view the list of bookmarks and folders for the current profile. Select to stream music or videos.

- **Enter address** – enter the Web page address of a site you want to visit. ► **New address** to enter a new Web page address or select one of the 10 addresses last entered. When you enter a Web page address, the normal http:// prefix is not needed.
- **History** – list of previously visited sites.
- **Refresh page** – refresh the Web page contents.
- **Save picture** – save a picture from a Web site.
- **Send link** – send a link for the current site to another phone.
- **Status** – display current status information, for example, profile, access type, connection time, data rate, security, address.
- **Make a call/End call** – if your subscription supports it, you can make a call while browsing the Internet by selecting **Make a call**. ► **End call** to end the call and continue browsing.

Using bookmarks

You use, create, and edit bookmarks in your mobile phone just as you do with a PC Internet browser.

To work with bookmarks

► **Internet services** ► **More** ► **Bookmarks** and select a bookmark ► **More**. Select an option.

Downloading

You can download pictures, themes, games and ringtones, from Web sites directly to your phone.

 *Contact your network operator or service provider for more information if menu options are not available.*

To download from www.sonyericsson.com

► Internet services ► More ► Bookmarks ► Sony Ericsson. Select the content you want to download and follow the instructions that appear.

Stored information

When browsing, you can save information in your phone.

 *It is advisable to clear any sensitive information about previously visited Internet services. This is to avoid a security risk if your phone is misplaced, lost or stolen.*

The following information can be saved:

- Cookies – improve site access efficiency.
- Passwords – improve server access efficiency.

To allow or clear cookies in your phone

► Connectivity ► Internet settings ► Cookies and select an option and confirm.

To clear the password list

► Connectivity ► Internet settings ► Clear passwords and ► Yes to confirm.

Using applications for Java™

You can run applications for Java™ on your phone. A number of these applications need to connect to the Internet to receive information, for example, games that download new levels from a game server or news applications that download instant news from a Web site.

You need an HTTP Internet profile to allow applications for Java™ to connect to the Internet. Please contact your network operator or service provider for the correct settings.

To select a profile for Java™

- 1 Scroll to Connectivity ► Settings for Java™ ► Internet profiles.
- 2 Select the HTTP profile you want to use.

Internet security

Your phone has support for both WAP and HTTP secure browsing. To activate a secure connection to the WAP gateway, you need to turn on security in your Internet profile. If your Internet profile is an HTTP profile, the connection will be secure if the URL starts with https://.



Security for connection between a WAP gateway and WAP service provider is the responsibility of the WAP service provider.

To turn on a secure connection (WAP)

► **Connectivity** ► **Internet settings** ► **Internet profiles** and select a profile ► **More** ► **Settings**.
Turn on security.

Trusted certificates

To establish a secure connection when using certain Internet services, for example, banking, you need certificates in your phone.

Trusted certificates are used to verify the WAP gateway or the HTTP server that you are connecting to. Your phone may already contain trusted certificates when you buy it. You can also download new certificates using the browser.

To check the certificates in your phone

► **Connectivity** ► **Internet settings** ► **Security**
► **Trusted certificate**.

Synchronizing

You can synchronize your mobile phone contacts, appointments, tasks and notes with similar programs in, for example, a PC or mobile phone using Bluetooth wireless technology, the infrared port or a cable, and with similar programs on the Internet using WAP or HTTP. Please also visit www.SonyEricsson.com/support for more information about synchronizing.

To select synchronization order for names

► **Phonebook** ► **Options** ► **Advanced**
► **Synchronization order** to select the order in which first and last names appear in the phone when you synchronize contacts.

Synchronization with nearby devices

Install the synchronization program from the CD that comes with your phone or download it from www.SonyEricsson.com/support.

For more information, please refer to the synchronization software online help.

Remote synchronization with Internet programs

Contact your network operator for more information about the programs on the Internet with which you can synchronize, and to receive username, password and addresses for the different programs. You must also have an Internet profile set in your mobile phone, ➤ *61 Setting up Internet and email.*

To enter the settings

- 1 ▶ **Connectivity** ▶ **Synchronization** ▶ **New account**. If you do not have an account, you will be asked if you want to create an account. ▶ **Yes** to create a new account.
- 2 Enter a name for the new account ▶ **Continue**. A list of options will appear. Add the server address of the synchronization server, a server username and a server password. ▶ **OK** when you have entered each setting.
- 3 Select **Connection** and select the WAP or HTTP profile that you want to use for the synchronization.
- 4 Select **Applications** and select the applications that you want to synchronize, for example, **Phonebook** ▶ **OK**.

- 5 Select **Application settings** and select application. Enter the name of the database and, if required, your username and password ▶ **OK**.
- 6 Press  ▶ **Save** to save your new account.

To start remote synchronization

▶ **Connectivity** ▶ **Synchronization** and select a remote account ▶ **Start**.

Bluetooth™ wireless technology

Your phone has built-in Bluetooth wireless technology which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a handsfree, PC, a remote screen or other phones.

You can, for example, have a conversation via a cordless Bluetooth handsfree or browse the Internet, wirelessly connected via a mobile phone. You can automatically synchronize information in your phone and your PC and use the remote control functionality to control applications on your PC. You can also exchange, for example, business cards, calendar items and pictures. To use a remote screen, ➤ *53 Remote screen.*



We recommend that your phone and the Bluetooth device you are communicating with are within a range of 10 metres. The connection may be improved if there are no solid objects between your phone and the other Bluetooth device.

Before you start

To communicate with another Bluetooth device, you first need to turn Bluetooth on and add the device to the list of devices in your phone. You can exchange items, use a remote screen and play games without adding the device to the list. To synchronize with your PC and browse the Internet, you also need to install software on your PC from the CD that comes with your phone, or download it from www.SonyEricsson.com/support.

To turn Bluetooth on

► **Connectivity** ► **Bluetooth** ► **Turn on**.

To add a device to your phone

- 1 ► **Connectivity** ► **Bluetooth** ► **My devices** ► **New device**. The Bluetooth function of the other device must also be on.
- 2 ► **Add** and your phone will search for all types of available Bluetooth devices. ► **More** if you want to select a specific type of device to search for.

- 3 The phone searches for Bluetooth devices. A list of available devices is displayed. Select a device.
- 4 If the device you are adding to your phone has its own passcode, enter this passcode in your phone. If not, create a passcode of digits yourself and enter it in both devices.

To organize your list of devices

► **Connectivity** ► **Bluetooth** ► **My devices** and select a device from the list. ► **More** to view a list of options.

Phone name

You can choose a name for your phone. This name is shown in other devices when your phone is found, and it is also used for the infrared port. In order for your phone to be found by other Bluetooth devices, you must turn on Bluetooth and make your phone visible.

To enter a phone name

► **Connectivity** ► **Bluetooth** ► **Options** ► **Phone name**. When Bluetooth is turned on, the name is shown in other devices and your phone is visible to other devices.

To hide or show your phone when using Bluetooth

► Connectivity ► Bluetooth ► Options ► Visibility and select Show phone or Hide phone.

To add a Bluetooth handsfree to your phone

► Connectivity ► Bluetooth ► Handsfree. The first time you add a handsfree, **Add a handsfree device to use with the phone?** is displayed ► Yes. If you already have a handsfree in your list of devices
 ► Connectivity ► Bluetooth ► Handsfree
 ► My handsfree ► New handsfree ► Add.

Transferring sound

When you are using a Bluetooth handsfree with your phone, you can choose where the sound should be transferred during a call. You can also select where the sound should be handled when answering an incoming call with the keypad.

To transfer sound when using a handsfree

During a call, press  ► Transfer sound. Select to transfer sound either to the phone or to other handsfree devices that have been added to your phone.

To direct sound when answering a call with a handsfree

► Connectivity ► Bluetooth ► Handsfree ► Incoming call and select In phone or In handsfree.

Sending and receiving

To send or receive an item using Bluetooth wireless technology, you need to make sure that the devices are within range.

After you select Bluetooth as the transfer method, a list of possible receiving devices is presented. First in the list will be the last device you were in contact with and devices that have been previously added to your phone. The phone also searches for other devices that are shown in the list.

To send an item

Select the item that you want to send, for example, a phonebook contact ► Phonebook and select a contact ► More ► Send contact ► Via Bluetooth. The phone searches for devices. Select the device you want to send the item to ► Select.

To receive an item

► Connectivity ► Bluetooth ► Turn on. Make sure that your phone is visible to other devices. When you receive the item, follow the instructions that appear on the screen.

Remote control

You can use your phone as a remote control device to control PC applications such as a media player or Microsoft® PowerPoint® presentations.

To select remote control

► **Connectivity** ► **Bluetooth** ► **Remote control**.

Select the configuration file you want to use and the PC you want to connect to.

File transfer

You can use a PC to view and transfer content in the **File manager**. You can use the drag-and-drop function of your PC to:

- Transfer files from the phone to the PC.
- Transfer files from the PC to the phone.
- Delete files from the phone.

File browsing

You can browse and retrieve files contained in other devices that support the server role of the file transfer profile. To do this, you must first add the other device to your list of **My devices**.



To check whether the other device has support for this specific function, please refer to its list of available Bluetooth services.

To browse files

► **Connectivity** ► **Bluetooth** ► **My devices**.
Select a device ► **Browse**.

Infrared port

You can use the infrared port to establish contact between your phone and a PC or another device equipped with an infrared port. You can, for example, synchronize calendar items, ► *64 Synchronizing*, and send items such as pictures and contacts.




If you are connecting to a PC, please refer to its user documentation.

To turn the infrared port on

► **Connectivity** ► **Infrared port** ► **On** ► **10 minutes**
to turn on infrared for 10 minutes only.

To connect two devices

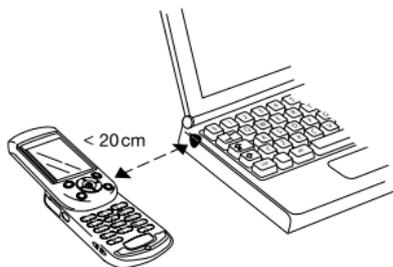

Place your phone as in the picture. The infrared port on the phone must face the infrared port on the other device. Your phone now establishes contact with the other device.

To send an item using the infrared port (example: a contact)

Make sure that the infrared port of both devices is on. ▶ **Phonebook** and select a contact, when contacts is default phonebook. ▶ **More** ▶ **Send contact** ▶ **Via infrared**.

More features

Time and date, alarm clock, calendar, tasks, SIM card lock, etc.

Time and date

The time is always displayed in standby.

- To set the time ▶ **Settings** ▶ the **General tab** ▶ **Time & date** ▶ **Time**. Enter the time ▶ **Save**.
- To set the time format (12-hour or 24-hour clock) ▶ **Format** and select an option.
- To set the date and date format ▶ **Settings** ▶ the **General tab** ▶ **Time & date** ▶ **Date**.

Advanced time settings

In **Settings** ▶ the **General tab** ▶ **Time & date** you can set time zone and daylight saving time.

If you have activated **Auto time zone**, you are asked whether you want to update the time when your phone changes network. If you press **Yes**, the time is updated automatically.

Alarm clock

The alarm can be set to ring at a specific time within 24 hours, or recurrently at a specific time on several days. You can have both these alarms set at the same time. The alarm signal rings even if the phone is set to silent or turned off.

More features

To set an alarm

- ▶ **Organizer** ▶ **Alarms** ▶ **Alarm** and enter the time
- ▶ **Save**.

Using the alarm

- To change the alarm time, ▶ **Organizer** ▶ **Alarms** ▶ **Alarm** and enter a new time.
- To turn the alarm signal off when it rings, press any key. If you do not want the alarm to be repeated ▶ **Turn off**.
- To cancel the alarm ▶ **Organizer** ▶ **Alarms** ▶ **Alarm** ▶ **Turn off**.
- To set a recurrent alarm ▶ **Organizer** ▶ **Alarms** ▶ **Recurrent alarm**. Enter the time and select the days that you want the alarm to recur by scrolling and pressing **Mark**. ▶ **Done** to exit the menu.
- To select an alarm signal ▶ **Organizer** ▶ **Alarms** ▶ **Alarm signal**.

Calendar

You can use the calendar to keep track of important meetings. The calendar can be synchronized with a PC calendar or with a calendar on the Web,
➡ *64 Synchronizing*.

Appointments and tasks

You can save up to 300 appointments and 80 tasks depending on the size of each item. You can add a new appointment or task or use an old one as a template by copying and editing it. You can also set a reminder for an appointment or task.

To add a new appointment

▶ **Organizer** ▶ **Calendar** and select the date for the appointment ▶ **New appointment** ▶ **Add**. Enter date, subject, location and reminder. Confirm each entry.

To add a new task

- 1 ▶ **Organizer** ▶ **Tasks** ▶ **New task** ▶ **Add**.
- 2 Select a category. If the category is a phone call, enter the phone number ▶ **Continue**.
- 3 Enter a subject ▶ **Continue**.
- 4 To set a reminder for your task ▶ **Yes**.

To set reminders for appointments

▶ **Organizer** ▶ **Calendar** ▶ **More** ▶ **Advanced** ▶ **Reminders**.

To set reminders for tasks

▶ **Organizer** ▶ **Tasks** and select a task ▶ **More** ▶ **Reminders**.

Reminder options

► **Always** if you want the reminder to sound even though the phone is turned off. When the reminder sounds ► **Yes** to read the appointment or task, or call the phone number in a phone task. ► **No** to turn off the reminder.



A reminder set in the calendar affects a reminder set for the same time in tasks or vice versa.

To view an appointment

Organizer ► **Calendar** and select a day on which you have an appointment (marked in bold). Scroll to the appointment ► **View**.

To view a task

► **Organizer** ► **Tasks** and select a task ► **View**.

Viewing your calendar

To view your calendar ► **Organizer** ► **Calendar**. Days on which you have appointments are marked in bold. ► **More** ► **View week** to view a certain week.

Navigating in your calendar

Use the navigation key to move between days or weeks. In the monthly and weekly views, you can also use the keypad as follows.

- | | |
|-----------------------|---------------------|
| 1 Back a week | 3 Next week |
| 4 Back a month | 6 Next month |
| 7 Back a year | 9 Next year |
| C Today's date | |

Calendar settings

- **Organizer** ► **Calendar** ► **More** and select an option:
- **View week** – select, add, edit or delete appointments.
 - **New appointment** – add a new appointment.
 - **Change date** – change the date of your calendar.
 - **Advanced** – options for find, delete all, set reminders or select a start day of week.

Find an appointment

You can search for appointments that contain a specific text.

To search for appointments

- **Organizer** ► **Calendar** ► **More** ► **Advanced** ► **Find**. Enter the text you want to search for ► **OK**. Appointments that match your search are shown. ► **View** to view your appointments or ► **More** for options to reschedule, edit, send, copy or delete.

More features

Exchanging appointments or tasks

You can send and receive appointments or tasks using Bluetooth wireless technology, the infrared port or picture messaging.

To send an appointment or a task

In the list of appointments and tasks for a certain day, select the item to send ► **More** ► **Send** and select a transfer method.

Receiving an appointment or a task

When **Add appointment?** or **Add task?** is displayed ► **Yes** to save the appointment or task.

Notes

If you need to remember something, you can save it as a note in your phone. You can save up to 10 notes.

To add a note

► **Organizer** ► **Notes** ► **New note** ► **Add** and enter the note ► **Save**.

To handle the notes

► **Organizer** ► **Notes** and a list of notes appears. Select the note that you want to handle. ► **More** to edit, show a note in standby (or hide it), send, or delete a note.

Exchanging notes

You can send and receive notes using Bluetooth wireless technology, the infrared port or picture messaging. You can also synchronize notes with a PC, ► *64 Synchronizing*.

To send a note

► **Organizer** ► **Notes** and select the note ► **More** ► **Send** and select a transfer method.

To receive a note

Add note? appears ► **Yes** to save the note with other notes.

Profiles

Your phone has predefined profiles set to suit a certain environment. For example, the ringtone is turned off in the **Meeting** profile. You can add accessories to, rename, or change these profiles. You can reset all profile settings to the default settings.

Automatic activation

Some profiles, for example **In car**, are automatically activated when used with a specific accessory. When the accessory is disconnected, the profile is changed back.

To select a profile

- ▶ Settings ▶ the General tab ▶ Profiles
- ▶ Select profile.

To change a profile setting

- ▶ Settings ▶ the General tab ▶ Profiles ▶ Edit profile
- and select a setting that you want to change.

To rename a profile

- ▶ Settings ▶ the General tab ▶ Profiles ▶ Edit profile
- ▶ Profile name.

To reset all profile settings

- ▶ Settings ▶ the General tab ▶ Profiles
- ▶ Reset profiles.

Stopwatch

Your phone has a stopwatch that can save several laps. The stopwatch continues to run when you answer an incoming call.

- ▶ Organizer ▶ Stopwatch ▶ Start. ▶ Stop or
- ▶ New lap if you want a lap time. To reset the stopwatch ▶ Reset.

Timer

Your phone has a built-in timer. When the timer rings, press any key to turn it off.

- ▶ Organizer ▶ Timer and enter the hours, minutes and seconds after which you want the timer to ring.

Display light

The display light can be set to **Automatic** or **Off**.

In automatic mode, the display light is turned off a few seconds after you last press a key. Regardless of Light setting, the screen itself is also turned off a few more seconds after a last key press, to optimize standby time.

- ▶ Settings ▶ the Display tab ▶ Light.

Start-up screen

When you turn your phone on or off, the Sony Ericsson start-up screen appears. Your network operator's own start-up screen may appear instead. You can also set your own start-up screen.

- ▶ Settings ▶ the Display tab ▶ Start-up screen and select a file for the start-up screen.

Calculator

The phone has a standard calculator.

► Organizer ► Calculator.

- Press  or  to select $\div \times - + . \% =$
- Press  to delete the figure.
- Press  to enter a decimal point.

SIM card lock

The SIM card lock protects your subscription, but not the phone itself, from unauthorized use. If you change SIM cards, the phone still works with the new SIM card.

Most SIM cards are locked at the time of purchase. If the SIM card lock is on, you have to enter a PIN (Personal Identity Number) every time you turn on your phone.

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and the message **PIN blocked** appears. To unblock it, you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your network operator.



If the message Codes do not match appears, you entered the new PIN incorrectly. If the message Wrong PIN appears, followed by Old PIN:, you entered your old PIN incorrectly.

To unblock your SIM card

When **PIN blocked** is displayed, enter your PUK
► OK. Enter a new four- to eight-digit PIN ► OK.
Re-enter the new PIN to confirm ► OK.

To edit your PIN

► Settings ► the General tab ► Locks ► SIM lock
► Change PIN.

To turn the SIM card lock on or off

► Settings ► the General tab ► Locks ► SIM lock
► Protection and select On or Off. Enter your PIN
► OK.

Keypad lock

You can lock the keypad to avoid dialling a number by accident.



Calls to the international emergency number 112 can still be made even when the keypad is locked.

Automatic keylock

Automatic keylock locks the keypad a short while after you last press a key.

To set the automatic keylock

- ▶ Settings ▶ the General tab ▶ Locks
- ▶ Automatic keylock.

To lock the keypad manually

Slide the lock/light switch or press  ▶ Lock keys. You can still answer an incoming call and the keypad locks again after it. The keypad remains locked until you unlock it manually.

To unlock the keypad, slide the lock/light switch or press  ▶ Unlock.

Phone lock

The phone lock protects the phone against unauthorized use if it is stolen and the SIM card is exchanged. The phone is not locked when you buy it. You can change the phone lock code (0000) to any four- to eight-digit personal code.

Phone lock on

If the phone lock is on, the message **Phone locked** appears each time you turn on the phone. Enter your code followed by **OK** to use your phone.

Automatic phone lock

If the phone lock is set to automatic, you do not need to enter your phone lock code until a different SIM card is inserted in the phone.



It is important that you remember your new code. If you should forget it, you have to hand in your phone to your local Sony Ericsson retailer.

To set the phone lock

- ▶ Settings ▶ the General tab ▶ Locks ▶ Phone lock
- ▶ Protection and select an alternative. Enter the phone lock code ▶ OK.

To edit your phone lock code

- ▶ Settings ▶ the General tab ▶ Locks ▶ Phone lock
- ▶ Change code.

Code memo

You can save security codes, for example, for credit cards in the code memo in your phone. Then all you need to remember is the passcode to open the code memo. You can save a maximum of 10 codes in the code memo.

Checkword and security

To confirm that you have entered the correct passcode for the code memo and to prevent unauthorized access to your codes, you must enter a checkword.

When you enter your passcode to open the code memo, the checkword is shown for a short time. If the passcode is correct, the correct codes are shown. If you enter the incorrect passcode, the checkword and the codes that are shown are also incorrect.

Factors strengthening the security of the code memo function are:

- You get no feedback about whether the passcode is correct, except for the checkword, and only you know the checkword.
- All codes are encrypted in the phone.
- When you access your codes, they are shown for a limited time only.

To open code memo for the first time

- 1 ▶ **Organizer** ▶ **Code memo**. A message with instructions is displayed ▶ **Continue**.
- 2 Enter a new four-digit passcode for the code memo ▶ **Continue**.
- 3 Re-enter the new passcode to confirm.

- 4 Enter a checkword (maximum 15 characters) ▶ **Done**. The checkword can consist of both letters and numbers. The next time you open the code memo, your checkword appears after you enter the passcode, and then your added codes are shown.

To add a new code

- ▶ **Organizer** ▶ **Code memo** and enter your passcode
▶ **New code** ▶ **Add**. Enter a name associated with the code, for example, name of the credit card company ▶ **Continue**. Enter the code ▶ **Done**.

To change the passcode

- Open code memo as described above ▶ **More**
▶ **Change passcode**. Enter your new passcode
▶ **Continue**. Re-enter the new passcode ▶ **Continue**.
Enter a checkword ▶ **Done**.

Forgot your passcode?

If you forget your passcode, just enter any passcode to access the code memo function. The checkword and codes that are shown are incorrect. You must now reset the code memo.

To reset code memo

- ▶ More ▶ Reset. Reset code memo? is displayed
- ▶ Yes. The code memo is reset and all entries are cleared. The next time you enter the code memo, start at, ➡ 76 To open code memo for the first time.

Online services

Online services are customized services offered by network operators, independently of mobile phones and mobile phone manufacturers.

A SIM card which supports online services works in the same way as a normal SIM card. When you have inserted your SIM card and turned on your phone, your network operator can download data to your SIM card. When you restart your phone after the first data download, a new submenu appears under the menu.



This menu only appears if your SIM card supports this service. Your phone may not support all of the services offered. Some operators may not use the name “online services”.

To enter your new menu section

Select the operator menu on the desktop.

- ▶ Connectivity ▶ Online services.

Troubleshooting

Why doesn't the phone work the way I want?

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of the problems you can easily correct yourself.

However, if you need to hand in your phone for repair, please note that you may lose information and content that you have saved in your phone. You are advised to make a copy of such information before handing your phone in for repair.

Master reset

You can return the phone to its original state by deleting the changes that you have made to settings, and the content that you have added or edited.

- If you select **Reset settings**, the changes that you have made to settings will be deleted.
- If you select **Reset all**, in addition to your changes to settings, all contacts, messages, personal data, and content that you have downloaded, received or edited will also be deleted.

To reset the phone

- 1 ▶ Settings ▶ the General tab ▶ Master reset.
- 2 ▶ Reset settings or Reset all.
- 3 Enter the phone lock code (0000 or the new code if you have changed it) ▶ OK.

 If you select **Reset all**, content such as melodies and pictures that you have downloaded, received or edited is also deleted.

The phone cannot be switched on

Recharge or replace the battery, ➡ 5 To insert the SIM card and charge the battery.

No indication of charging

When you start charging a battery that is empty or a battery that has not been used for a long time, it may take up to 30 minutes before the battery icon appears in the display.

Menu language

If the display shows a language that you do not understand, you can always choose **Automatic** (determined by your SIM card) by pressing  8888  in standby. You can always choose **English** by pressing  0000  in standby.

Grey menu options

Grey text indicates a function that is temporarily unavailable, for example, if a service is not activated, or if your subscription does not support the function. Since you cannot send themes, pictures and sounds that are copyright-protected, the **Send** menu is sometimes unavailable.

Insert SIM

There is no SIM card in the phone or you may have inserted it incorrectly. Insert a SIM card, ➡ 5 To insert the SIM card and charge the battery.

Insert correct SIM card

The phone is set to work only with certain SIM cards. Insert the correct SIM card.

Emergency calls only

You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112, ➡ 19 Emergency calls.

No network

There is no network within range or the received signal is too weak. You have to move to get a signal that is strong enough.

Wrong PIN/Wrong PIN2

You have entered your PIN or PIN2 incorrectly. Enter the correct PIN or PIN2 ► **Yes**, ➤ *74 SIM card lock*.

Codes do not match

When you want to change a security code (for example your PIN) you have to confirm the new code by entering it again. The two codes that you have entered do not match, ➤ *74 SIM card lock*.

PIN blocked/PIN2 blocked

You have entered your PIN or PIN2 incorrectly three times in a row. To unblock, ➤ *74 SIM card lock*.

PUK blocked

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row. Contact your network operator or service provider.

Phone locked

The phone is locked. To unlock the phone, ➤ *75 Phone lock*.

Phone lock code

Your phone comes with the phone lock code, 0000. You can change it to any four- to eight-digit code, ➤ *75 Phone lock*.

Number not permitted

The fixed dialling function is activated and the number you have dialled is not on your fixed numbers list, ➤ *31 Fixed dialling*.

Charging, alien battery

The battery you are using is not a Sony Ericsson approved battery, ➤ *82 Battery use and care*.

Additional information

Sony Ericsson Web site, safe and efficient use, warranty, declaration of conformity.

Sony Ericsson Consumer Web site

On www.SonyEricsson.com/support there is a support section where help and tips are only a few clicks away. Here you find the latest PC software updates and tips on how to use your product more efficiently.

Guidelines for Safe and Efficient Use

Please read this information before using your mobile phone.



Recommendations

- Always treat your product with care and keep it in a clean and dust-free place.
- Do not expose your product to liquid or moisture or humidity.
- Do not expose your product to extreme high or low temperatures.
- Do not expose your product to open flames or lit tobacco products.
- Do not drop, throw or try to bend your product.
- Do not paint your product.



- Do not use your product near medical equipment without requesting permission.
- Do not use your product when in, or around aircraft, or areas posted "turn off two-way radio".
- Do not use your product in an area where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above your car's air bag.
- Do not attempt to disassemble your product. Only Sony Ericsson authorised personnel should perform service.



Antenna

Only use an antenna that has been specifically designed by Sony Ericsson for your mobile phone. Use of unauthorised or modified antennas could damage your mobile phone and may violate regulations, causing loss of performance and SAR levels above the recommended limits (see below).

Efficient use

Hold your mobile phone as you would any other phone. Do not cover the top of the phone when in use, as this affects call quality and may cause the phone to operate at a higher power level than needed, thus shortening talk and standby times.

Radio frequency (RF) exposure and SAR

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (The Institute of Electrical and Electronics Engineers Inc.) through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the general population. All Sony Ericsson mobile phone models are designed to operate within these stringent levels. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below this value.

This is because the mobile phone is designed to use the minimum power required to reach the network.

Variations in SAR below the radio frequency exposure guidelines do not mean that there are variations in safety. While there may be differences in SAR levels among mobile phones, all Sony Ericsson mobile phone models are designed to meet radio frequency exposure guidelines.

A separate leaflet with SAR information for this mobile phone model is included with the material that comes with this mobile phone. This information can also be found, together with more information on radio frequency exposure and SAR, on www.SonyEricsson.com/.

Driving

Please check if local laws and regulations restrict the use of mobile phones while driving or require drivers to use handsfree solutions. We recommend that you use only Ericsson or Sony Ericsson handsfree solutions intended for use with your product. Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna supports the installation.

Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

Personal medical devices

Mobile phones may affect the operation of cardiac pacemakers and other implanted equipment. Please avoid placing the mobile phone over the pacemaker, e.g. in your breast pocket. When using the mobile phone,

Additional information

place it at the ear opposite the pacemaker. If a minimum distance of 15 cm (6 inches) is kept between the mobile phone and the pacemaker, the risk of interference is limited. If you have any reason to suspect that interference is taking place, immediately turn off your mobile phone. Contact your cardiologist for more information.

For other medical devices, please consult the manufacturer of the device.

CHILDREN

DO NOT ALLOW CHILDREN TO PLAY WITH YOUR MOBILE PHONE OR ITS ACCESSORIES. THEY COULD HURT THEMSELVES OR OTHERS, OR COULD ACCIDENTALLY DAMAGE THE MOBILE PHONE OR ACCESSORY. YOUR MOBILE PHONE OR ITS ACCESSORY MAY CONTAIN SMALL PARTS THAT COULD BE DETACHED AND CREATE A CHOKING HAZARD.



Disposing of the product

Your mobile phone should not be placed in municipal waste. Please check local regulations for disposal of electronic products.



Power supply

Connect the AC power adapter only to designated power sources as marked on the product. Make sure the cord is positioned so that it will not be subjected to damage or stress. To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it. The AC power adapter must not be used outdoors or in damp areas. Never alter the cord or plug. If the plug will not fit into the outlet, have a proper outlet installed by a qualified electrician.

Emergency calls

Mobile phones operate using radio signals, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any mobile phone for essential communications (e.g. medical emergencies).

Emergency calls may not be possible on all cellular networks or when certain network services and/or mobile phone features are in use. Check with your local service provider.

Battery use and care

We recommend that you fully charge the battery before you use your mobile phone for the first time. The battery can only be charged in temperatures between +5°C (+41°F) and +45°C (+113°F).

A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used.

The talk and standby times depend on the actual transmission conditions when using the mobile phone. If the mobile phone is used near a base station, less power is required and talk and standby times are prolonged.

- **Warning!** May explode if disposed of in fire.
- Use only Ericsson or Sony Ericsson branded original batteries and chargers intended for use with your mobile phone. Other chargers may not charge sufficiently or may produce excessive heat. Using other batteries and chargers could be dangerous.
- Do not expose the battery to liquid.
- Do not let the metal contacts on the battery touch another metal object. This could short-circuit and damage the battery.
- Do not disassemble or modify the battery.
- Do not expose the battery to extreme temperatures, never above +60°C (+140°F). For maximum battery capacity, use the battery in room temperature.
- Turn off your mobile phone before removing the battery.
- Keep out of children's reach.
- Use the battery for the intended purpose only.
- Do not allow the battery to be put into the mouth. Battery electrolytes may be toxic if swallowed.



Disposing of the battery

Please check local regulations for disposal of batteries or call your local Sony Ericsson Customer Care Center for information.



The battery should never be placed in municipal waste. Use a battery disposal facility if available.

Limited Warranty

Sony Ericsson Mobile Communications AB, S-221 88 Lund, Sweden, (Sony Ericsson), provides this Limited Warranty for your mobile phone and original accessory delivered with your mobile phone (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Customer Care Centre (national rates may apply) or visit www.SonyEricsson.com to get further information.

Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of one (1) year.

What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorised distributors or service partners, in the country/region* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that your personal settings/downloads might be lost when the Product is repaired or replaced.

Conditions

- 1 The warranty is valid only if the original proof of purchase issued to the original purchaser by an, for this Product, Sony Ericsson authorised dealer, specifying the date of purchase and serial number**, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
- 2 If Sony Ericsson repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.
- 3 This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid. A rechargeable battery can be charged and discharged hundreds of times. However, it will eventually wear out – this is not a defect. When the talk-time or standby time is noticeably shorter, it is time to replace your battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson.
- 4 Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
- 5 This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.

- 6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Ericsson or Sony Ericsson branded original accessories intended for use with the Product.
- 7 Tampering with any of the seals on the Product will void the warranty.

THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales / purchase contract.

*EUROPEAN UNION (EU)

If you have purchased your Product in an EU country you can have your Product serviced, under the conditions set out above, within the warranty period in any EU country where an identical Product is sold by an authorised Sony Ericsson distributor. To find out if your Product is sold in the EU country you are in, please call the local Sony Ericsson Customer Care Centre. Please observe that certain services may not be possible elsewhere than in the country of original purchase, for example due to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other EU countries. It may not be possible to repair SIM-locked Products.

** In some countries/regions additional information is requested. If so, this is clearly shown on the valid proof of purchase.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



Declaration of Conformity

We, **Sony Ericsson Mobile Communications AB** of
Nya Vattentorget
S-221 88 Lund, Sweden

declare under our sole responsibility that our product

Sony Ericsson type AAB-1021051-BV

and in combination with our accessories, to which
this declaration relates is in conformity with the
appropriate standards 3GPP TS 51.010-1,
EN 301489-7, EN 300328, EN 301489-17 and
EN 60950, following the provisions of Radio
Equipment and Telecommunication Terminal
Equipment directive **99/5/EC** with requirements
covering EMC directive **89/336/EEC**, and Low
Voltage directive **73/23/EEC**.

Lund, April 2004

 **CE 0682**

*Hiroshi Yoshioka, Head of Product Business Unit
GSM/UMTS*

We fulfil the requirements of the R&TTE Directive
(**99/5/EC**).

Icons

Icon descriptions

The table below describes the icons which appear while in standby, camera and video recorder mode.

Icon Description

Standby

	Desktop icon
	Tells you the strength of the GSM network signal
	GPRS is within range
	GPRS is within range and can be used
	Tells you are in a premium charge zone
	Tells you the status of the battery
	You cannot receive any incoming calls
	You have missed an incoming call
	All incoming calls are diverted to a defined number

Icon Description

	No calls or only certain calls from numbers in a list are received
	All signals are off, except the alarm
	The alarm clock has been set and is on
	The timer has been set and is on
	A profile other than Normal has been chosen
	The card lock or phone lock is on A secure Internet connection is established
	You have received a text message
	You have received an email message
	You have received a picture message
	You have received a voice message
	You have received a WAP push message
	You have received a message via cell broadcast
	The infrared port is on

Icons

Icon Description

-  Infrared communication is in progress
-  Bluetooth is on
-  A GPRS session is in progress
-  Line 1 is in use for outgoing calls
-  Line 2 is in use for outgoing calls
-  Ciphering is currently not being provided by the network
-  An ongoing call
-  My friends status icon
-  The media player is running
- Java** A Java™ application is running

Icon Description

Camera and video recorder modes

-  Activate the camera mode
-  Activate the video recorder mode
-  Save to the Memory Stick Duo
-  Save to the phone memory
-  Picture size 1280x960
-  Picture size 640x480
-  Picture size 320x240
-  Picture size 160x120
-  Burst 4 (Four consecutive pictures)
-  Video size 176x144
-  Video size 128x96

Icon Description

-  Brightness between -2.0EV to +2.0EV
-  Night mode
-  Light is on
-  White balance Incandescent
-  White balance Fluorescent
-  White balance Daylight
-  White balance Cloudy
-  Spot photometry
-  Activate the self-timer
-  Show or hide all icons
-  Press  to delete pictures and video clips

Index

A

- accept calls 30
- account settings, email 40
- alarm clock 69
- alerts 56
- animations 51
- answering
 - calls 18
 - using voice control 26
- answering service 24
- appointments 70–72
- area information 45
- ask to save 22
- assembling, phone 5
- automatic redialling 19

B

- battery
 - alien 79
 - charging 5
 - inserting 5
 - use and care 82

blocking

- contacts 44
- strangers 44
- Bluetooth™ 65–68
- bookmarks, Internet 62
- business cards 34
- buttons 8

C

- calculator 74
- calendar 70–72
- call costs 31–32
- call list 23
- call priority 32
- call time 31
- call waiting 28
- calling
 - from call list 24
 - from phonebook 21
 - numbers in message 35
 - using voice dialling 26

calls

- accepting 30
- answering 19
- automatic redialling 19
- diverting 27
- emergency 19
- fixed dialling 31
- handling two calls 28
- international 19
- making 7, 18
- making notes during 33
- missed 19
- putting on hold 28
- receiving 7, 18
- recording 57
- rejecting 19
- restricting 30
- speed dialling 24
- camera 48–51
- cell information 46
- certificates, Internet security 64
- charging, battery 5
- closed user groups 32

code memo 75
codes
 PIN 5
 PUK 6, 79
conference calls 29
connectors 8
contacts 20
 as default phonebook 20
 groups of 33
 My friends 42
 synchronizing 64
cookies 63
copying
 to/from Memory Stick Duo 15
 to/from SIM card 23
cost information 31
credit limit 32

D
date, setting 69
declaration of conformity 86
display
 icons 87
 light 72
diverting calls 27

E
email
 receiving settings 61
 using 39–42
 wizard 61
emergency calls 19
emergency numbers 19

F
file manager 14
fixed dialling 31
formatting texts, in messages 35

G
games 60
glossary, messaging 46
groups 33

H
handsfree 67
help texts, in phone 10
hiding number 33

I
icons, in display 87
infrared port 68–69
instant messaging *See* My friends 42
international calls 19
Internet
 cookies 63
 security 63–64
 settings 61
 wizard 61

J
Java™, settings 63

K
key sound 56
keypad lock 74
keys 8

L
language
 changing 10
 in phone 10, 78
letters
 entering 11–13
 quick keys 17

Index

light

- camera 50
- display 72
- video recorder 51

locks

- phone lock 79
- SIM card 74

long messages 36

M

magic word 26

making calls 16

media player 54–55

melodies 56

Memory Stick Duo™ 13–15

- copying to/from 15
- deleting 15
- inserting 14
- moving to/from 15

menu language 78

menus 10, 16

message alert 56

messages

- area information 45

cell information 46

email 39

glossary 46

instant 42

picture 37

text 34

microphone, turning off/on 18

missed calls 19

MMS *See* picture messages 37

model name 16

multitap text input

entering 12

quick keys 17

music, playing 54

MusicDJ™ 57

My friends 42–43

N

network operator services 77

networks, selecting 18

night mode 50

notepad 33

notes 72

number

hiding 33

my own 30

O

on if silent 56

online services 77

P

passcodes

Bluetooth 66

code memo 76

passwords, Internet 63

pause 17

personal ringtones 56

phone language 10

phone lock 75, 79

phone overview 8

phonebook

adding contacts 20

checking memory 23

synchronizing 64

picture messages 37–39

picture sizes 50

pictures 51–53

PIN code
 changing 74
 entering 7

PlayNow™ 55
priority, when calling 32
profiles 72–73
PUK 74, 79

Q
quick keys 16

R
radio 58
recording
 calls 57
 sounds 57
 video clips 49
 voice commands 25–27
redialling 19
resetting phone 77
restricted dialling 30
ringtones 56
roaming 18

S
safety guidelines 80
saving
 from picture messages 38
 from text messages 36
 radio channels 59
screen 72
screen saver 53
security
 code memo 75
 Internet 63–64
 SIM card lock 74
self-portrait 51
sending
 appointments 72
 business cards 34
 contacts 23
 melodies and ringtones 57
 notes 72
 pictures 53
 tasks 72
 themes 60
settings for Java™ 63
setup wizard 6

shortcuts 11, 16–17
SIM card
 copying to/from 23
 inserting 5
 lock 74
 phonebook 20
 saving numbers on 20
 unblocking 74
SIM numbers 20–21
slide show 52
SMS *See* text messages 34
sound recorder 57
speaker volume 18
speed dialling 24
start-up screen 73
stopwatch 73
streaming media 55
synchronizing 64–65

T
T9™ Text Input
 entering letters 12
 quick keys 17
tasks 70–72

Index

templates

- for picture messages 39

- for text messages 36

text input, quick keys 17

text messages 34–37

themes 60

time, setting 69

timer 73

turning on/off

- Bluetooth 66

- infrared port 68

- key sound 56

- phone 7

- phone lock 75

- ringtones, melodies 56

- SIM lock protection 74

two voice lines 29

U

unblocking

- contacts 44

- PIN 6

- SIM card 74

V

vibrating alert 56

video clips 54

video recorder 48–51

voice answering 26–27

voice control 25–27

voice dialling 26

voicemail 24

volume

- changing 18

- setting ringtone 56

- vibrating alert 56

W

WAP *See* Internet 61

warranty 83

wizard

- for Internet or email settings 61

- setup 6

writing

- using multitap text input 12

- using T9™ Text Input 12

writing languages 11

Z

zoom 49